	odel and Serial Ran			Number	Replac	<u>es</u>	<u>Location</u>	
		ipped with wheel 40-113A);	40-1				Main Whe	
		ipped with wheel 40-75H);	40-7				Main Whe	
		ipped with wheel 40-77A);	40-7	<del></del>			Aux Whee	· · · · · · · · · · · · · · · · · · ·
		uipped with wheel 40-113A);	40-1				Main Whe	
		uipped with wheel 40-75H);	40-7		·		Main Whe	
		uipped with wheel 40-77A);	40-7				Aux Whee	
		uipped with wheel 40-113A);	40-1				Main Whe	
	· · · · · · · · · · · · · · · · · · ·	uipped with wheel 40-75H);	40-7				Main Whe	
		uipped with wheel 40-77A);	40-7				Aux Whee	) 
	·	quipped with wheel 40-75H);	40-7				Main Whe	
11:	2TC s/n all (When e	quipped with wheel 40-77A);	40-7	7A			Aux Whee	)
11:	2TCA s/n all (When	equipped with wheel 40-75H);	40-7	5H			Main Whe	el
11:	2TCA s/n all (When	equipped with wheel 40-77A);	40-7	7A			Aux Whee	s <b>l</b>
114	4 s/n all (When equi	pped with wheel 40-75H);	40-7	5H			Main Whe	el
114	4 s/n all (When equi	pped with wheel 40-77A);	40-77	'A			Aux Whee	I
114	4B s/n all (When eq	uipped with wheel 40-75H);	40-7	5H			Main Whe	el
114	4B s/n all (When eq	uipped with wheel 40-77A);	40-77	'A			Aux Whee	l
690	0B s/n all (When eq	uipped with wheel 40-107A);	40-10	)7A			Main Whe	el
690	0C s/n all (When eq	uipped with wheel 40-107A);	40-10	)7A			Main Whe	el
698	5 s/n all (When equi	pped with wheel 40-107A);	40-10	)7A			Main Whe	el
698	5A s/n all (When eq	uipped with wheel 40-107A);	40-10	)7A			Main Whe	el
700	0 s/n all (When equi	pped with wheel 40-128C);	40-12	:8C			Main Whe	el
700	0 s/n all (When equi	pped with wheel 40-76E);	40-76	Ε			Aux Whee	I
840	0 s/n all (When equi	pped with wheel 40-107A);	40-10	7A			Main Whe	əl
980	0 s/n all (When equi	pped with wheel 40-107A);	40-10	7A			Main Whe	<b>el</b>
AT	-300 s/n all (When e	equipped with wheel 40-101);	40-10	1			Main Whe	əl
AT.	-301 s/n all (When e	equipped with wheel 40-101);	40-10	1			Main Whe	əl
AT-	-301 s/n all (When e	equipped with wheel 40-168);	40-16	8			Aux Whee	
AT-	-302 s/n all (When e	quipped with wheel 40-101);	40-10	1	,		Main Whe	əl
AT.	-302 s/n all (When e	quipped with wheel 40-168);	40-16	8			Aux Whee	
AT-	-302A s/n all (When	equipped with wheel 40-101);	40-10	1			Main Whe	el
AT-	-302A s/n all (When	equipped with wheel 40-168);	40-16	8			Aux Whee	
AT-	-400 s/n all (When e	quipped with wheel 40-133);	40-13	3			Main Whee	el
AT-	-400 s/n all (When e	quipped with wheel 40-168);	40-16	8			Aux Whee	1
			(	Project flygineer: Date: Engineerig Manager: Date:	Diriis Doline	Date: SEZ/R. Date: Plane	McFarlane Aviation 696 East 1700 Roa	d
,		·		Title:			ES REFERENCE	
				Size: A Scale	<b>NA</b> D	rawn: ScottD	Sheet: 1	of 76
Α	05/17/2012	SEE REVISION SHEET		Drawing Number:		6568		REVISION
		ODICINAL						

02/07/2010


ORIGINAL

Α

Rev Model and Serial Range AT-400A s/n all (When equipped with wheel 40-101);	Part Number Replaces 40-101	<u>Location</u> Main Wheel
AT-400A s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-401 s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-401 s/n all (When equipped with wheel 40-234);	40-234	Main Wheel
AT-401A s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-401A s/n all (When equipped with wheel 40-234);	40-234	Main Wheel
AT-402 s/n all (When equipped with wheel 40-133);	40-133	Main Wheel
AT-402 s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-501 s/n all (When equipped with wheel 40-133);	40-133	Main Wheel
AT-501 s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-502 s/n all (When equipped with wheel 40-133);	40-133	Main Wheel
AT-502 s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-503 s/n all (When equipped with wheel 40-133);	40-133	Main Wheel
AT-503 s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-503A s/n all (When equipped with wheel 40-133);	40-133	Main Wheel
AT-503A s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
AT-602 s/n all (When equipped with wheel 40-403);	40-403	Main Wheel
AT-802 s/n all (When equipped with wheel 40-279);	40-279 40-279A	Main Wheel Main Wheel
A-1 s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
A-1A s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
A-1B s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
A-1C-180 s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
A-1C-200 s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
100 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
100 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
100 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
A100 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
A100 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
A100 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
B100 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
B100 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
B100 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
C-45G s/n all (When equipped with wheel 040-21101);	040-21101	Main Wheel

McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006								)6		
Title:	WHEEL TO PLANE SALES REFERENCE									
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	2	of	76
Drawin	g Numbe	er:		656	8	•			F	REVISION

w Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
C-45G s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
C-45G s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
C-45H s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
C-45H s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
C-45H s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
D18C s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
D18C s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
D18C s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
D18S s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
D18S s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
D18S s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
E18S* s/n BA-1 thru BA-402 (When equipped with wheel 040-21101);	040-21101		Main Wheel
E18S* s/n BA-1 thru BA-402 (When equipped with wheel 40-168);	40-168		Aux Wheel
E18S* s/n BA-1 thru BA-402 (When equipped with wheel 40-170);	40-170		Main Wheel
E18S* s/n BA-497 thru BA-497 (When equipped with wheel 040-21101);	040-21101		Main Wheel
E18S* s/n BA-497 thru BA-497 (When equipped with wheel 40-168);	40-168		Aux Wheel
E18S* s/n BA-497 thru BA-497 (When equipped with wheel 40-170);	40-170		Main Wheel
E18S-9700 s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
E18S-9700 s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
E18S-9700 s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
G18S s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
G18S s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
G18S s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
H18 s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
H18 s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
H18 s/n all (When equipped with wheel 40-170);	40-170		Main Wheel
JRB-6 s/n all (When equipped with wheel 040-21101);	040-21101		Main Wheel
JRB-6 s/n all (When equipped with wheel 40-168);	40-168		Aux Wheel
JRB-6 s/n all (When equipped with wheel 40-170);	40-170		Main Wheel

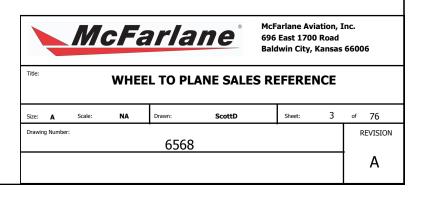

Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
RC-45J (SNB-5P) s/n all (When equipped with wheel 040-21101);	040-21101	Main Wheel
RC-45J (SNB-5P) s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
RC-45J (SNB-5P) s/n all (When equipped with wheel 40-170);	40-170	Main Wheel
TC-45G s/n all (When equipped with wheel 040-21101);	040-21101	Main Wheel
TC-45G s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
TC-45G s/n all (When equipped with wheel 40-170);	40-170	Main Wheel
TC-45H s/n all (When equipped with wheel 040-21101);	040-21101	Main Wheel
TC-45H s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
TC-45H s/n all (When equipped with wheel 40-170);	40-170	Main Wheel
TC-45J s/n all (When equipped with wheel 040-21101);	040-21101	Main Wheel
TC-45J s/n all (When equipped with wheel 40-168);	40-168	Aux Wheel
TC-45J s/n all (When equipped with wheel 40-170);	40-170	Main Wheel
19A s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
A23-19 s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
B19 s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
B19 s/n all (When equipped with wheel 40-59);	40-59	Main Wheel
B19 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
M19A s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
1900D s/n all (When equipped with wheel 40-273B);	40-273B	Main Wheel
200 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
200 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
200 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
200C s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
200C s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
200C s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
200CT s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
200CT s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
200CT s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
200T s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
200T s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
200T s/n all (When equipped with wheel 40-289);	40-289	Main Wheel




Rev Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
A200 (C-12A)* s/n BC-1 thru BC-61 (When equipped with wheel 40-289);	40-289		Main Wheel
A200 (C-12A)* s/n BD-1 thru BD-9999 (When equipped with wheel 40-289);	40-289		Main Wheel
A200 (C-12C)* s/n BC-1 thru BC-9999 (When equipped with wheel 40-289);	40-289		Main Wheel
A200 (C-12C)* s/n BD-1 thru BD-30 (When equipped with wheel 40-289);	40-289		Main Wheel
A200C (UC-12B) s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
A200CT (C-12D,C-12F,FWC-12D) s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
A200CT (RC-12D,RC-12H) s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
A200CT (RC-12G) s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
B200 s/n all (When equipped with wheel 40-203);	40-203		Main Wheel
B200 s/n all (When equipped with wheel 40-204);	40-204		Main Wheel
B200 s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
B200C s/n all (When equipped with wheel 40-203);	40-203		Main Wheel
B200C s/n all (When equipped with wheel 40-204);	40-204		Main Wheel
B200C s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
B200CT s/n all (When equipped with wheel 40-203);	40-203		Main Wheel
B200CT s/n all (When equipped with wheel 40-204);	40-204		Main Wheel
B200CT s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
B200T s/n all (When equipped with wheel 40-203);	40-203		Main Wheel
B200T s/n all (When equipped with wheel 40-204);	40-204		Main Wheel
B200T s/n all (When equipped with wheel 40-289);	40-289		Main Wheel
23 s/n all (When equipped with wheel 40-113B);	40-113B		Aux Wheel
23 s/n all (When equipped with wheel 40-113C);	40-113C		Main Wheel
23 s/n all (When equipped with wheel 40-87A);	40-87A		Aux Wheel
A23 s/n all (When equipped with wheel 40-113C);	40-113C		Main Wheel
B23 s/n all (When equipped with wheel 40-113C);	40-113C		Main Wheel
A23-24 s/n all (When equipped with wheel 40-113C);	40-113C		Main Wheel
A24 s/n all (When equipped with wheel 40-113C);	40-113C		Main Wheel
A24R s/n all (When equipped with wheel 40-113B);	40-113B		Aux Wheel



Model and Serial Range A24R s/n all (When equipped with wheel 40-113C);	Part Number Replaces 40-113C	<u>Location</u> Main Wheel
A24R s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
B24R s/n all (When equipped with wheel 40-113B);	40-113B	Aux Wheel
B24R s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
B24R s/n all (When equipped with wheel 40-59);	40-59	Main Wheel
B24R s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
C24R s/n all (When equipped with wheel 40-113B);	40-113B	Aux Wheel
C24R s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
C24R s/n all (When equipped with wheel 40-59);	40-59	Main Wheel
C24R s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
300* s/n FA-1 thru FA-230 (When equipped with wheel 40-204);	40-204	Main Wheel
300* s/n FF-A thru FF-19 (When equipped with wheel 40-204);	40-204	Main Wheel
35-33 s/n all (When equipped with wheel 40-37);	40-37	Main Wheel
35-33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35-A33 s/n all (When equipped with wheel 40-37);	40-37	Main Wheel
35-A33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35-B33 s/n all (When equipped with wheel 40-37);	40-37	Main Wheel
35-B33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35-C33 s/n all (When equipped with wheel 40-113C);	40-113C	Main Wheel
35-C33 s/n all (When equipped with wheel 40-59);	40-59	Main Wheel
35-C33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35-C33 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
35-C33A s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
E33A s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
F33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
F33A s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
F33A s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
F33A s/n all (When equipped with wheel 40-83A);	40-83A	Main Wheel
F33A s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
F33C s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
F33C s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
F33C s/n all (When equipped with wheel 40-83A);	40-83A	Main Wheel
F33C s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel




G33 sin all (When equipped with wheel 40-83); 40-83 Main Wheel  G33 sin all (When equipped with wheel 40-87D); 40-87D  Aux Wheel  35 sin all (When equipped with wheel 40-83); 40-83 Main Wheel  35 sin all (When equipped with wheel 40-83); 40-83 Main Wheel  35R sin all (When equipped with wheel 40-83); 40-83 Main Wheel  35R sin all (When equipped with wheel 40-89); 40-98 Main Wheel  A35* sin D-1501 thru D-2200 (When equipped with wheel 40-83); 40-83 Main Wheel  A35* sin D-1501 thru D-2200 (When equipped with wheel 40-83); 40-98 Main Wheel  A35* sin D-15001 thru D-15001 (When equipped with wheel 40-83); 40-98 Main Wheel  A35* sin D-15001 thru D-15001 (When equipped with wheel 40-83); 40-98 Main Wheel  A35* sin all (When equipped with wheel 40-83); 40-98 Main Wheel  A35* sin all (When equipped with wheel 40-83); 40-83 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-93); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main Wheel  C35 sin all (When equipped with wheel 40-83); 40-98 Main	Rev Model and Serial Range G33 s/n all (When equipped with wheel 40-77E);	Part Number Repla 40-77E	<u>Location</u> Aux Wheel
35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel 35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel 40-83); 40-83 Main Wheel 40-83); 40-83 Main Wheel 40-83); 40-98 Main Wheel 40-84); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-88); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-89); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel 40-85 s/n all (When equipped with wheel 40-88); 40-98 Main Wheel 40-85 s/n all (When equipped with wheel 40-	G33 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel 35R s/n all (When equipped with wheel 40-93); 40-98 Main Wheel 35R s/n all (When equipped with wheel 40-98); 40-98 Main Wheel A35* s/n D-1501 thru D-2200 (When equipped with wheel 40-83); 40-98 Main Wheel wheel 40-98); 40-98 Main Wheel wheel 40-98); 40-98 Main Wheel wheel 40-83); 40-83 Main Wheel wheel 40-83); 40-83 Main Wheel wheel 40-83); 40-83 Main Wheel wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel C35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98	G33 s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
35R s/n all (When equipped with wheel 40-83); 40-83 Main Wheel A35r s/n D-1501 thru D-2200 (When equipped with wheel 40-98); 40-98 Main Wheel A35r s/n D-1501 thru D-2200 (When equipped with wheel 40-83); A35r s/n D-1501 thru D-2200 (When equipped with wheel 40-98); A35r s/n D-1501 thru D-15001 (When equipped with wheel 40-98); A35r s/n D-15001 thru D-15001 (When equipped with wheel 40-83); A35r s/n D-15001 thru D-15001 (When equipped with wheel 40-98); B35 s/n all (When equipped with wheel 40-83); A35r s/n D-15001 thru D-15001 (When equipped with wheel 40-98); B35 s/n all (When equipped with wheel 40-98); A35r s/n D-15001 thru D-15001 (When equipped with wheel 40-98); B35 s/n all (When equipped with whe	35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
35R s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           A35° s/n D-1501 thru D-2200 (When equipped with wheel 40-83);         40-83         Main Wheel           A35° s/n D-1501 thru D-2200 (When equipped with wheel 40-98);         40-98         Main Wheel           A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-83);         40-83         Main Wheel           A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-88);         40-98         Main Wheel           Wheel 40-98);         Main Wheel         Main Wheel           B35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           B35 s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           C35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           C35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           D35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel	35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
A35° s/n D-1501 thru D-2200 (When equipped with wheel 40-83); A35° s/n D-1501 thru D-2200 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n D-15001 thru D-15001 (When equipped with wheel 40-98); A35° s/n all (When equipped with wheel 40-98); A0-98 A0-	35R s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
wheel 40-83;         A35* s/n D-1501 thru D-2200 (When equipped with wheel 40-98);         40-98         Main Wheel           A35* s/n D-15001 thru D-15001 (When equipped with wheel 40-83);         40-83         Main Wheel           A35* s/n D-15001 thru D-15001 (When equipped with wheel 40-98);         40-98         Main Wheel           A35* s/n D-15001 thru D-15001 (When equipped with wheel 40-98);         40-98         Main Wheel           wheel 40-98);         40-98         Main Wheel           B35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           C35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           C35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           D35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           D35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           E35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           F35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           F35 s/n all (When equipped with wheel 40-98);         40-98         Main Wh	35R s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
wheel 40-98);         A35* s/n D-15001 thru D-15001 (When equipped with wheel 40-83);         40-83         Main Wheel           A35* s/n D-15001 thru D-15001 (When equipped with wheel 40-98);         40-98         Main Wheel           B35* s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           B35 s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           C35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           C35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           D35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           D35* s/n all (When equipped with wheel 40-88);         40-98         Main Wheel           D35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           E35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           E35* s/n all (When equipped with wheel 40-83);         40-98         Main Wheel           F35* s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           F35* s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           G35* s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           G35* s/n all (When equipped with wheel 40-98);         40-98	` ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '	40-83	Main Wheel
wheel 40-83);         A35" s/n ID-15001 (When equipped with wheel 40-98);         40-98         Main Wheel           B35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           B35 s/n all (When equipped with wheel 40-98);         40-98         Main Wheel           C35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           C35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           D35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           D35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           E35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           E35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel           F35 s/n all (When equipped with wheel 40-83);         40-83         Main Wheel		40-98	Main Wheel
wheel 40-98);         B35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         B35 s/n all (When equipped with wheel 40-98);       40-98       Main Wheel         C35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         C35 s/n all (When equipped with wheel 40-98);       40-98       Main Wheel         D35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         D35 s/n all (When equipped with wheel 40-88);       40-98       Main Wheel         E35 s/n all (When equipped with wheel 40-88);       40-98       Main Wheel         E35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         F35 s/n all (When equipped with wheel 40-89);       40-98       Main Wheel         F35 s/n all (When equipped with wheel 40-98);       40-98       Main Wheel         G35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         G35 s/n all (When equipped with wheel 40-98);       40-98       Main Wheel         H35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         H35 s/n all (When equipped with wheel 40-83);       40-83       Main Wheel         J35 s/n all (When equipped with wheel 40-83);       40-98       Main Wheel         J35 s/n all (When equipped with wheel 40-83);       4		40-83	Main Wheel
B35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  C35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel	, , , , , , , , , , , , , , , , , , , ,	40-98	Main Wheel
C35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel C35 s/n all (When equipped with wheel 40-98); 40-98 D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel	B35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
C35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  E35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  E35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  F35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  F35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	B35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
D35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  F35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  F35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	C35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
D35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel E35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel F35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel S35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	C35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
E35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel F35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	D35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
E35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	D35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
F35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  G35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	E35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
F35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel G35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	E35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
G35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel H35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel H35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	F35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
G35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	F35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
H35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	G35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
H35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel  M35 s/n all (When equipped with wheel 40-83); 40-98 Main Wheel	G35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
J35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	H35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
J35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	H35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
K35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	J35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
K35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	J35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
M35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	K35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
M35 s/n all (When equipped with wheel 40-98); 40-98 Main Wheel	K35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
	M35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
N35 s/n all (When equipped with wheel 40-83); 40-83 Main Wheel	M35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
	N35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel

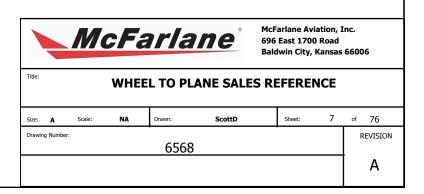

Rev Model and Serial Range N35 s/n all (When equipped with wheel 40-98);	Part Number Replaces 40-98	<u>Location</u> Main Wheel
P35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
P35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
S35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
S35 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
V35 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
V35A s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
V35B s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
V35B-TC s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
V35B-TC s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
V35B-TC s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
36 s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
36 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
36 s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
A36 s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
A36 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
A36 s/n all (When equipped with wheel 40-83A);	40-83A	Main Wheel
A36 s/n all (When equipped with wheel 40-83B);	40-83B	Main Wheel
A36 s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
A36TC s/n all (When equipped with wheel 40-77E);	40-77E	Aux Wheel
A36TC s/n all (When equipped with wheel 40-83A);	40-83A	Main Wheel
A36TC s/n all (When equipped with wheel 40-83B);	40-83B	Main Wheel
A36TC s/n all (When equipped with wheel 40-87D);	40-87D	Aux Wheel
B36TC s/n all (When equipped with wheel 40-83B);	40-83B	Main Wheel
50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
B50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
C50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
D50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
D50A s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
D50B s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
D50C s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
D50E s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
E50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
F50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel



Model and Serial Range		<u>places</u> <u>Location</u>
G50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
H50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
J50 s/n all (When equipped with wheel 40-134A);	40-134A	Main Wheel
95-55 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-55 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
95-A55* s/n TC-191 thru TC-379 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-A55* s/n TC-191 thru TC-379 (When equipped with wheel 40-98);	40-98	Main Wheel
95-A55* s/n TC-380 thru TC-501 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-A55* s/n TC-380 thru TC-501 (When equipped with wheel 40-98);	40-98	Main Wheel
95-B55 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
95-B55 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-B55 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
95-B55 s/n all (When equipped with wheel 40-98G);	40-98G	Main Wheel
95-B55A s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-B55A s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
95-B55B s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-B55B s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
95-C55* s/n TC-350 thru TC-350 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-C55* s/n TC-350 thru TC-350 (When equipped with wheel 40-98);	40-98	Main Wheel
95-C55* s/n TE-1 thru TE-451 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-C55* s/n TE-1 thru TE-451 (When equipped with wheel 40-98);	40-98	Main Wheel
95-C55A* s/n TC-350 thru TC-350 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-C55A* s/n TC-350 thru TC-350 (When equipped with wheel 40-98);	40-98	Main Wheel
95-C55A* s/n TE-1 thru TE-451 (When equipped with wheel 40-128D);	40-128D	Main Wheel
95-C55A* s/n TE-1 thru TE-451 (When equipped with wheel 40-98);	40-98	Main Wheel

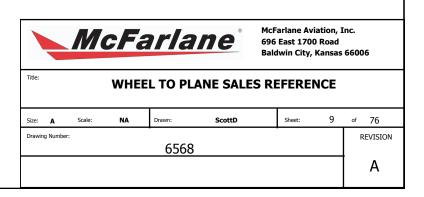


Model and Serial Range	Part Number Replaces	Location
D55 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
D55 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
D55A s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
D55A s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
E55 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
E55 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
E55 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
E55 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
E55 s/n all (When equipped with wheel 40-98G);	40-98G	Main Wheel
E55A s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
E55A s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
56TC s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
56TC s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
A56TC s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
A56TC s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
58 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
58 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
58 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
58 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
58 s/n all (When equipped with wheel 40-98G);	40-98G	Main Wheel
58P s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
58P s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
58P s/n all (When equipped with wheel 40-171);	40-171	Main Wheel
58TC s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
58TC s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
58TC s/n all (When equipped with wheel 40-171);	40-171	Main Wheel
60 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
A60 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
B60 s/n all (When equipped with wheel 40-128);	40-128	Main Wheel
B60 s/n all (When equipped with wheel 40-171);	40-171	Main Wheel
B60 s/n all (When equipped with wheel 40-56C);	40-56C	Aux Wheel
65* s/n L-1 thru L-6 (When equipped with wheel 40-170B);	40-170B	Main Wheel
65* s/n L-1 thru L-6 (When equipped with wheel 40-204);	40-204	Main Wheel




<ul> <li>Model and Serial Range</li> <li>65* s/n LC-1 thru LC-239 (When equipped with wheel</li> <li>40-170B);</li> </ul>	<u>Part Number</u> <u>Replaces</u> 40-170B	<u>Location</u> Main Wheel
65* s/n LC-1 thru LC-239 (When equipped with wheel 40-204);	40-204	Main Wheel
65* s/n LF-7 thru LF-8 (When equipped with wheel 40-170B);	40-170B	Main Wheel
65* s/n LF-7 thru LF-8 (When equipped with wheel 40-204);	40-204	Main Wheel
A65 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
A65 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
70 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
70 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
76 s/n all (When equipped with wheel 40-83);	40-83	Main Wheel
76 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
77 s/n all (When equipped with wheel 40-59);	40-59	Main Wheel
77 s/n all (When equipped with wheel 40-87A);	40-87A	Aux Wheel
65-80 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
65-80 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
65-A80 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
65-A80 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
65-B80 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
65-B80 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
65-88 s/n all (When equipped with wheel 40-170B);	40-170B	Main Wheel
65-90 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
65-A90 s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
65-A90 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
65-A90-1 (U-21A,D; JU-21A; RU-21A,D) s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
65-A90-4 (RU-21E,H) s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
B90 s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
B90 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
C90 s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
C90 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
C90A s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
E90 s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel




Rev Model and Serial Range E90 s/n all (When equipped with wheel 40-204);	<u>Part Number</u> <u>Replaces</u> 40-204	<u>Location</u> Main Wheel
F90 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
F90 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
F90 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
H90 (T-44A) s/n all (When equipped with wheel 40-170A);	40-170A	Main Wheel
95 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
95 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
B95 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
B95 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
B95A s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
B95A s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
D95A s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
D95A s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
E95 s/n all (When equipped with wheel 40-128D);	40-128D	Main Wheel
E95 s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
99 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
99 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
99 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
99A s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
99A s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
99A s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
A99A s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
A99A s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
A99A s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
B99 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
B99 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
B99 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
C99 s/n all (When equipped with wheel 40-203);	40-203	Main Wheel
C99 s/n all (When equipped with wheel 40-204);	40-204	Main Wheel
C99 s/n all (When equipped with wheel 40-289);	40-289	Main Wheel
A45 (T-34A,B-45) s/n all (When equipped with wheel 40-98);	40-98	Main Wheel
A45 (T-34A,B-45) s/n all (When equipped with wheel 40-98);	40-98	Main Wheel

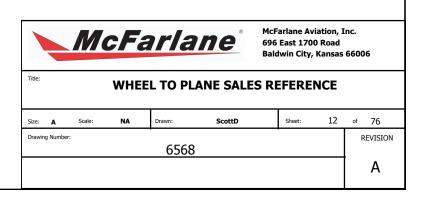

<ul> <li>Model and Serial Range</li> <li>D45 (T-34B) s/n all (When equipped with wheel 40-98);</li> </ul>	<u>Part Number</u> <u>Replaces</u> 40-98	<u>Location</u> Main Wheel
T-34C s/n all (When equipped with wheel 40-110);	40-110	Aux Wheel
T-34C s/n all (When equipped with wheel 40-111A);	40-111A	Main Wheel
T-34C (34C) s/n all (When equipped with wheel 40-110);	40-110	Aux Wheel
T-34C (34C) s/n all (When equipped with wheel 40-111A);	40-111A	Main Wheel
T-34C (T-34C-1) s/n all (When equipped with wheel 40-110);	40-110	Aux Wheel
T-34C (T-34C-1) s/n all (When equipped with wheel 40-111A);	40-111A	Main Wheel
17-30A s/n all (When equipped with wheel 40-75E);	40-75E	Main Wheel
17-30A s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
17-31A s/n all (When equipped with wheel 40-75E);	40-75E	Main Wheel
17-31A s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
17-31ATC s/n all (When equipped with wheel 40-75E);	40-75E	Main Wheel
17-31ATC s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2 s/n all (When equipped with wheel 40-90F);	40-90F	Main Wheel
BN-2 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A MK. III s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A MK. III s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A MK. III s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A MK. III s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A MK. III s/n all (When equipped with wheel 40-98F);	40-98F	Main Wheel

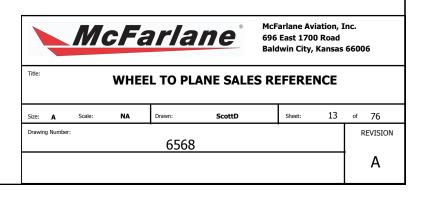


Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
BN-2A MK. III-2 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A MK. III-2 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A MK. III-2 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A MK. III-2 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A MK. III-2 s/n all (When equipped with wheel 40-98F);	40-98F	Main Wheel
BN-2A MK. III-3 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A MK. III-3 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A MK. III-3 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A MK. III-3 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A MK. III-3 s/n all (When equipped with wheel 40-98F);	40-98F	Main Wheel
BN-2A-2 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A-2 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A-2 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A-2 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A-20 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A-20 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A-20 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A-20 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A-21 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A-21 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A-21 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A-21 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A-26 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A-26 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A-26 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
BN-2A-26 s/n all (When equipped with wheel 40-97F);	40-97F	Main Wheel
BN-2A-27 s/n all (When equipped with wheel 40-76C);	40-76C	Aux Wheel
BN-2A-27 s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
BN-2A-27 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel

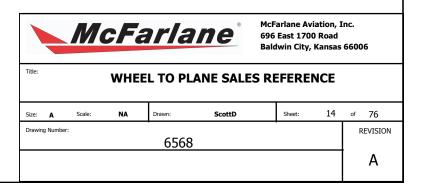

Rev Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
BN-2A-27 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2A-3 s/n all (When equipped with wheel 40-76C);	40-76C		Aux Wheel
BN-2A-3 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2A-3 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
BN-2A-3 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2A-6 s/n all (When equipped with wheel 40-76C);	40-76C		Aux Wheel
BN-2A-6 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2A-6 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
BN-2A-6 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2A-8 s/n all (When equipped with wheel 40-76C);	40-76C		Aux Wheel
BN-2A-8 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2A-8 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
BN-2A-8 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2A-9 s/n all (When equipped with wheel 40-76C);	40-76C		Aux Wheel
BN-2A-9 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2A-9 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
BN-2A-9 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2B-20 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2B-20 s/n all (When equipped with wheel 40-90B);	40-90B		Main Wheel
BN-2B-20 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2B-21 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2B-21 s/n all (When equipped with wheel 40-90B);	40-90B		Main Wheel
BN-2B-21 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2B-26 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2B-26 s/n all (When equipped with wheel 40-90B);	40-90B		Main Wheel
BN-2B-26 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2B-27 s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2B-27 s/n all (When equipped with wheel 40-90B);	40-90B		Main Wheel
BN-2B-27 s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2T s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2T s/n all (When equipped with wheel 40-90B);	40-90B		Main Wheel
BN-2T s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel
BN-2T-4R s/n all (When equipped with wheel 40-76D);	40-76D		Aux Wheel
BN-2T-4R s/n all (When equipped with wheel 40-97F);	40-97F		Main Wheel



Model and Serial Range BN-2T-4S s/n all (When equipped with wheel 40-128E);	Part Number Replaces 40-128E	<u>Location</u> Main Wheel
BN-2T-4S s/n all (When equipped with wheel 40-76D);	40-76D	Aux Wheel
172D s/n all (When equipped with 40-113);	40-113	Main Wheel
172D s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172D s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172E s/n all (When equipped with 40-113);	40-113	Main Wheel
172E s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172E s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172F (T-41A) s/n all (When equipped with 40-113);	40-113	Main Wheel
172F (T-41A) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172F (T-41A) s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172G (T-41A) s/n all (When equipped with 40-113);	40-113	Main Wheel
172G (T-41A) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172G (T-41A) s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172H (T-41A) s/n all (When equipped with 40-113);	40-113	Main Wheel
172H (T-41A) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172H (T-41A) s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172I s/n all (When equipped with 40-113);	40-113	Main Wheel
172I s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172I s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172K (T-41A) s/n all (When equipped with 40-113);	40-113	Main Wheel
172K (T-41A) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172K (T-41A) s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172L s/n all (When equipped with 40-113);	40-113	Main Wheel
172L s/n all (When equipped with 40-97A);	40-97A	Main Wheel
172L s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172M* s/n 17260759 thru 17263458 (When equipped with 40-113);	40-113	Main Wheel
172M* s/n 17260759 thru 17263458 (When equipped with 40-97A);	40-97A	Main Wheel
172M* s/n 17260759 thru 17263458 (When equipped with D-30660-1);	D-30660-1	Main Wheel

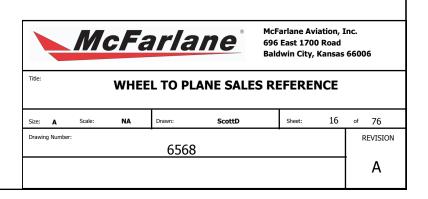


Rev Model and Serial Range 172M* s/n 17263459 thru 17267584 (When equipped	Part Number Replaces 40-113	<u>Location</u> Main Wheel
with 40-113);		
172M* s/n 17263459 thru 17267584 (When equipped with 40-77);	40-77	Aux Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30291-6);	D-30291-6	Main Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30500);	D-30500	Aux Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30580);	D-30580	Main Wheel
172M* s/n 17263459 thru 17267584 (When equipped with D-30660-1);	D-30660-1	Main Wheel
172N s/n all (When equipped with 40-113);	40-113	Main Wheel
172N s/n all (When equipped with 40-77);	40-77	Aux Wheel
172N s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
172N s/n all (When equipped with D-30500);	D-30500	Aux Wheel
172N s/n all (When equipped with D-30580);	D-30580	Main Wheel
172N s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172P s/n all (When equipped with 40-113);	40-113	Main Wheel
172P s/n all (When equipped with 40-77);	40-77	Aux Wheel
172P s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
172P s/n all (When equipped with D-30500);	D-30500	Aux Wheel
172P s/n all (When equipped with D-30580);	D-30580	Main Wheel
172P s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172Q s/n all (When equipped with 40-113);	40-113	Main Wheel
172Q s/n all (When equipped with 40-77);	40-77	Aux Wheel
172Q s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
172Q s/n all (When equipped with D-30500);	D-30500	Aux Wheel
172Q s/n all (When equipped with D-30580);	D-30580	Main Wheel
172Q s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172R s/n all (When equipped with 40-113);	40-113	Main Wheel
172R s/n all (When equipped with 40-77);	40-77	Aux Wheel
172RG s/n all (When equipped with 40-113);	40-113	Main Wheel
172RG s/n all (When equipped with 40-77);	40-77	Aux Wheel
172RG s/n all (When equipped with D-30500);	D-30500	Aux Wheel
172RG s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172S s/n all (When equipped with 40-113);	40-113	Main Wheel
172S s/n all (When equipped with 40-77);	40-77	Aux Wheel



Model and Serial Range	Part Number Replaces	
172D s/n all (When equipped with 40-113);	40-113	Main Wheel
172D s/n all (When equipped with 40-97A);	40-97A	Main Wheel
F172D s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172E s/n all (When equipped with 40-113);	40-113	Main Wheel
F172E s/n all (When equipped with 40-97A);	40-97A	Main Wheel
F172E s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172F s/n all (When equipped with 40-113);	40-113	Main Wheel
172F s/n all (When equipped with 40-97A);	40-97A	Main Wheel
F172F s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
-172G s/n all (When equipped with 40-113);	40-113	Main Wheel
172G s/n all (When equipped with 40-97A);	40-97A	Main Wheel
-172G s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-113);	40-113	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-97A);	40-97A	Main Wheel
F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with 40-113);	40-113	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with 40-97A);	40-97A	Main Wheel
F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172K s/n all (When equipped with 40-113);	40-113	Main Wheel
172K s/n all (When equipped with 40-97A);	40-97A	Main Wheel
-172K s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
172L s/n all (When equipped with 40-113);	40-113	Main Wheel
172L s/n all (When equipped with 40-97A);	40-97A	Main Wheel
-172L s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with 40-113);	40-113	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with 40-97A);	40-97A	Main Wheel
F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with 40-113);	40-113	Main Wheel



Rev Model and Serial Range F172M* s/n F17201235 thru F17201514 (When	Part Number Replaces 40-77	<u>Location</u> Aux Wheel
equipped with 40-77);		
F172M* s/n F17201235 thru F17201514 (When equipped with D-30291-6);	D-30291-6	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30500);	D-30500	Aux Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30580);	D-30580	Main Wheel
F172M* s/n F17201235 thru F17201514 (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172N s/n all (When equipped with 40-113);	40-113	Main Wheel
F172N s/n all (When equipped with 40-77);	40-77	Aux Wheel
F172N s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
F172N s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F172N s/n all (When equipped with D-30580);	D-30580	Main Wheel
F172N s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F172P s/n all (When equipped with 40-113);	40-113	Main Wheel
F172P s/n all (When equipped with 40-77);	40-77	Aux Wheel
F172P s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
F172P s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F172P s/n all (When equipped with D-30580);	D-30580	Main Wheel
F172P s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
FP172 s/n all (When equipped with 40-113);	40-113	Main Wheel
FP172 s/n all (When equipped with 40-97A);	40-97A	Main Wheel
FP172 s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
FR172E s/n all (When equipped with 40-113);	40-113	Main Wheel
FR172E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
FR172E s/n all (When equipped with 40-77);	40-77	Aux Wheel
FR172E s/n all (When equipped with 40-97A);	40-97A	Main Wheel
FR172E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
FR172E s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
FR172F s/n all (When equipped with 40-113);	40-113	Main Wheel
FR172F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
FR172F s/n all (When equipped with 40-77);	40-77	Aux Wheel
FR172F s/n all (When equipped with 40-97A);	40-97A	Main Wheel
FR172F s/n all (When equipped with D-30500);	D-30500	Aux Wheel
FR172F s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
FR172G s/n all (When equipped with 40-113);	40-113	Main Wheel

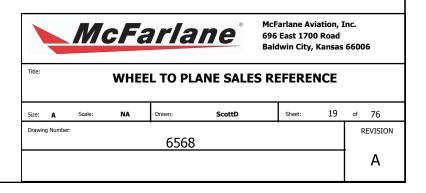


Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
FR172G s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
FR172G s/n all (When equipped with 40-77);	40-77		Aux Wheel
FR172G s/n all (When equipped with 40-97A);	40-97A		Main Wheel
FR172G s/n all (When equipped with D-30500);	D-30500		Aux Wheel
FR172G s/n all (When equipped with D-30660-1);	D-30660-1		Main Wheel
FR172H s/n all (When equipped with 40-113);	40-113		Main Wheel
FR172H s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
FR172H s/n all (When equipped with 40-77);	40-77		Aux Wheel
FR172H s/n all (When equipped with 40-97A);	40-97A		Main Wheel
FR172H s/n all (When equipped with D-30500);	D-30500		Aux Wheel
FR172H s/n all (When equipped with D-30660-1);	D-30660-1		Main Wheel
FR172J s/n all (When equipped with 40-113);	40-113		Main Wheel
FR172J s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
FR172J s/n all (When equipped with 40-77);	40-77		Aux Wheel
FR172J s/n all (When equipped with 40-97A);	40-97A		Main Wheel
FR172J s/n all (When equipped with D-30500);	D-30500		Aux Wheel
FR172J s/n all (When equipped with D-30660-1);	D-30660-1		Main Wheel
FR172K s/n all (When equipped with 40-113);	40-113		Main Wheel
FR172K s/n all (When equipped with 40-77);	40-77		Aux Wheel
FR172K s/n all (When equipped with D-30291-6);	D-30291-6		Main Wheel
FR172K s/n all (When equipped with D-30500);	D-30500		Aux Wheel
FR172K s/n all (When equipped with D-30660-1);	D-30660-1		Main Wheel
P172D s/n all (When equipped with 40-113);	40-113		Main Wheel
P172D s/n all (When equipped with 40-97A);	40-97A		Main Wheel
P172D s/n all (When equipped with D-30660-1);	D-30660-1		Main Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-113);	40-113		Main Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
R172E (T-41B,C,D) s/n all (When equipped with 40-97A);	40-97A		Main Wheel
R172F (T-41D) s/n all (When equipped with 40-113);	40-113		Main Wheel
R172F (T-41D) s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
R172F (T-41D) s/n all (When equipped with 40-97A);	40-97A		Main Wheel
R172G (T-41C,D) s/n all (When equipped with 40-113);	40-113		Main Wheel



Rev Model and Serial Range R172G (T-41C,D) s/n all (When equipped with	Part Number Replaces 40-76A	<u>Location</u> Aux Wheel
40-76A);		
R172G (T-41C,D) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
R172H (T-41D) s/n all (When equipped with 40-113);	40-113	Main Wheel
R172H (T-41D) s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
R172H (T-41D) s/n all (When equipped with 40-97A);	40-97A	Main Wheel
R172K s/n all (When equipped with 40-113);	40-113	Main Wheel
R172K s/n all (When equipped with 40-77);	40-77	Aux Wheel
R172K s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
R172K s/n all (When equipped with D-30500);	D-30500	Aux Wheel
R172K s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
177 s/n all (When equipped with 40-113);	40-113	Main Wheel
177 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
177 s/n all (When equipped with 40-77);	40-77	Aux Wheel
177 s/n all (When equipped with 40-97A);	40-97A	Main Wheel
177 s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
177 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
177 s/n all (When equipped with D-30580);	D-30580	Main Wheel
177 s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
177A s/n all (When equipped with 40-113);	40-113	Main Wheel
177A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
177A s/n all (When equipped with 40-77);	40-77	Aux Wheel
177A s/n all (When equipped with 40-97A);	40-97A	Main Wheel
177A s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
177A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
177A s/n all (When equipped with D-30580);	D-30580	Main Wheel
177A s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
177B s/n all (When equipped with 40-113);	40-113	Main Wheel
177B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
177B s/n all (When equipped with 40-77);	40-77	Aux Wheel
177B s/n all (When equipped with 40-97A);	40-97A	Main Wheel
177B s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
177B s/n all (When equipped with D-30500);	D-30500	Aux Wheel
177B s/n all (When equipped with D-30580);	D-30580	Main Wheel
177B s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
177RG s/n all (When equipped with 40-113);	40-113	Main Wheel




Rev Model and Serial Range 177RG s/n all (When equipped with 40-77);	Part Number Replaces 40-77	<u>Location</u> Aux Wheel
177RG s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
177RG s/n all (When equipped with D-30500);	D-30500	Aux Wheel
177RG s/n all (When equipped with D-30580);	D-30580	Main Wheel
177RG s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F177RG s/n all (When equipped with 40-113);	40-113	Main Wheel
F177RG s/n all (When equipped with 40-77);	40-77	Aux Wheel
F177RG s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
F177RG s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F177RG s/n all (When equipped with D-30580);	D-30580	Main Wheel
F177RG s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
180 s/n all (When equipped with 40-77);	40-77	Aux Wheel
180A s/n all (When equipped with 40-77);	40-77	Aux Wheel
180B s/n all (When equipped with 40-77);	40-77	Aux Wheel
180C s/n all (When equipped with 40-77);	40-77	Aux Wheel
180D s/n all (When equipped with 40-77);	40-77	Aux Wheel
180E s/n all (When equipped with 40-77);	40-77	Aux Wheel
180F s/n all (When equipped with 40-32);	40-32	Main Wheel
180F s/n all (When equipped with 40-75B);	40-75B	Main Wheel
180F s/n all (When equipped with 40-75D);	40-75D	Main Wheel
180F s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
180F s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
180G s/n all (When equipped with 40-32);	40-32	Main Wheel
180G s/n all (When equipped with 40-75B);	40-75B	Main Wheel
180G s/n all (When equipped with 40-75D);	40-75D	Main Wheel
180G s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
180G s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
180H s/n all (When equipped with 40-32);	40-32	Main Wheel
180H s/n all (When equipped with 40-75B);	40-75B	Main Wheel
180H s/n all (When equipped with 40-75D);	40-75D	Main Wheel
180H s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
180H s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with 40-32);	40-32	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with 40-75B);	40-75B	Main Wheel

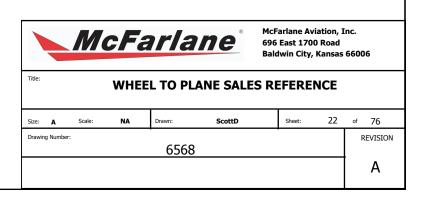


Rev Model and Serial Range 180J* s/n 18052285 thru 18052384 (When equipped with 40-75D);	Part Number Replaces 40-75D	<u>Location</u> Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with D-30291-1);	D-30291-1	Main Wheel
180J* s/n 18052285 thru 18052384 (When equipped with D-30291-3);	D-30291-3	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with 40-75B);	40-75B	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with 40-75D);	40-75D	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-1);	D-30291-1	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-2);	D-30291-2	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30291-3);	D-30291-3	Main Wheel
180J* s/n 18052385 thru 18052770 (When equipped with D-30660-3);	D-30660-3	Main Wheel
180K s/n all (When equipped with 40-75B);	40-75B	Main Wheel
180K s/n all (When equipped with 40-75D);	40-75D	Main Wheel
180K s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
180K s/n all (When equipped with D-30291-2);	D-30291-2	Main Wheel
180K s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
180K s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
182 s/n all (When equipped with 40-77);	40-77	Aux Wheel
182A s/n all (When equipped with 40-77);	40-77	Aux Wheel
182B s/n all (When equipped with 40-77);	40-77	Aux Wheel
182C s/n all (When equipped with 40-77);	40-77	Aux Wheel
182D s/n all (When equipped with 40-77);	40-77	Aux Wheel
182E s/n all (When equipped with 40-113);	40-113	Main Wheel
182E s/n all (When equipped with 40-55);	40-55	Aux Wheel
182E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182E s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182E s/n all (When equipped with 40-77);	40-77	Aux Wheel
182E s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182F s/n all (When equipped with 40-113);	40-113	Main Wheel
182F s/n all (When equipped with 40-55);	40-55	Aux Wheel




Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
182F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182F s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182F s/n all (When equipped with 40-77);	40-77	Aux Wheel
182F s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182F s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182G s/n all (When equipped with 40-113);	40-113	Main Wheel
182G s/n all (When equipped with 40-55);	40-55	Aux Wheel
182G s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182G s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182G s/n all (When equipped with 40-77);	40-77	Aux Wheel
182G s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182G s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182H s/n all (When equipped with 40-113);	40-113	Main Wheel
182H s/n all (When equipped with 40-55);	40-55	Aux Wheel
182H s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182H s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182H s/n all (When equipped with 40-77);	40-77	Aux Wheel
182H s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182H s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182J s/n all (When equipped with 40-113);	40-113	Main Wheel
182J s/n all (When equipped with 40-55);	40-55	Aux Wheel
182J s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182J s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182J s/n all (When equipped with 40-77);	40-77	Aux Wheel
182J s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182J s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182K s/n all (When equipped with 40-113);	40-113	Main Wheel
182K s/n all (When equipped with 40-55);	40-55	Aux Wheel
182K s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182K s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
182K s/n all (When equipped with 40-77);	40-77	Aux Wheel
182K s/n all (When equipped with 40-97A);	40-97A	Main Wheel
182K s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182L s/n all (When equipped with 40-113);	40-113	Main Wheel
182L s/n all (When equipped with 40-55);	40-55	Aux Wheel
182L s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
182L s/n all (When equipped with 40-76B);	40-76B	Aux Wheel

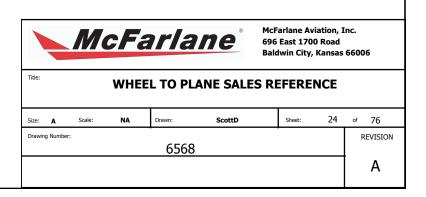


Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
182L s/n all (When equipped with 40-77);	40-77		Aux Wheel
182L s/n all (When equipped with 40-97A);	40-97A		Main Wheel
182L s/n all (When equipped with D-30500);	D-30500		Aux Wheel
182M s/n all (When equipped with 40-113);	40-113		Main Wheel
182M s/n all (When equipped with 40-55);	40-55		Aux Wheel
182M s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
182M s/n all (When equipped with 40-76B);	40-76B		Aux Wheel
182M s/n all (When equipped with 40-77);	40-77		Aux Wheel
182M s/n all (When equipped with 40-97A);	40-97A		Main Wheel
182M s/n all (When equipped with D-30500);	D-30500		Aux Wheel
182N s/n all (When equipped with 40-113);	40-113		Main Wheel
182N s/n all (When equipped with 40-55);	40-55		Aux Wheel
182N s/n all (When equipped with 40-76A);	40-76A		Aux Wheel
182N s/n all (When equipped with 40-76B);	40-76B		Aux Wheel
182N s/n all (When equipped with 40-77);	40-77		Aux Wheel
182N s/n all (When equipped with 40-97A);	40-97A		Main Wheel
182N s/n all (When equipped with D-30500);	D-30500		Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-113);	40-113		Main Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-55);	40-55		Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-76A);	40-76A		Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-76B);	40-76B		Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-77);	40-77		Aux Wheel
182P* s/n 18260826 thru 18262465 (When equipped with 40-97A);	40-97A		Main Wheel
182P* s/n 18260826 thru 18262465 (When equipped with D-30500);	D-30500		Aux Wheel
182P* s/n 18262466 thru 18265175 (When equipped with 40-113);	40-113		Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with 40-77);	40-77		Aux Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30291-6);	D-30291-6		Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30500);	D-30500		Aux Wheel

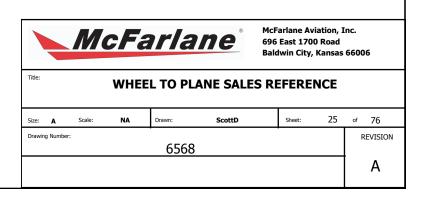


Model and Serial Range 182P* s/n 18262466 thru 18265175 (When equipped with D-30580);	Part Number Replaces D-30580	<u>Location</u> Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30660-1);	D-30660-1	Main Wheel
182P* s/n 18262466 thru 18265175 (When equipped with D-30660-3);	D-30660-3	Main Wheel
182Q s/n all (When equipped with 40-113);	40-113	Main Wheel
182Q s/n all (When equipped with 40-77);	40-77	Aux Wheel
182Q s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
182Q s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182Q s/n all (When equipped with D-30580);	D-30580	Main Wheel
182Q s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
182Q s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
182R s/n all (When equipped with 40-113);	40-113	Main Wheel
182R s/n all (When equipped with 40-77);	40-77	Aux Wheel
182R s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
182R s/n all (When equipped with D-30500);	D-30500	Aux Wheel
182R s/n all (When equipped with D-30580);	D-30580	Main Wheel
182R s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
182R s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
182S s/n all (When equipped with 40-75B);	40-75B	Main Wheel
182S s/n all (When equipped with 40-77);	40-77	Aux Wheel
182T s/n all (When equipped with 40-75B);	40-75B	Main Wheel
182T s/n all (When equipped with 40-77);	40-77	Aux Wheel
A182J s/n all (When equipped with 40-113);	40-113	Main Wheel
A182J s/n all (When equipped with 40-55);	40-55	Aux Wheel
A182J s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
A182J s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
A182J s/n all (When equipped with 40-77);	40-77	Aux Wheel
A182J s/n all (When equipped with 40-97A);	40-97A	Main Wheel
A182J s/n all (When equipped with D-30500);	D-30500	Aux Wheel
A182K s/n all (When equipped with 40-113);	40-113	Main Wheel
A182K s/n all (When equipped with 40-55);	40-55	Aux Wheel
A182K s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
A182K s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
A182K s/n all (When equipped with 40-77);	40-77	Aux Wheel
A182K s/n all (When equipped with 40-97A);	40-97A	Main Wheel

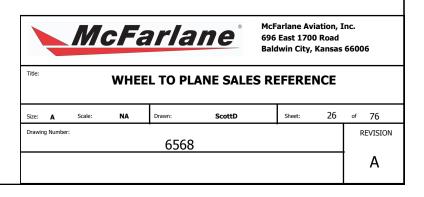

Rev Model and Serial Range A182K s/n all (When equipped with D-30500);	Part Number Replaces D-30500	<u>Location</u> Aux Wheel
A182L s/n all (When equipped with 40-113);	40-113	Main Wheel
A182L s/n all (When equipped with 40-55);	40-55	Aux Wheel
A182L s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
A182L s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
A182L s/n all (When equipped with 40-77);	40-77	Aux Wheel
A182L s/n all (When equipped with 40-97A);	40-97A	Main Wheel
A182L s/n all (When equipped with D-30500);	D-30500	Aux Wheel
A182N s/n all (When equipped with 40-113);	40-113	Main Wheel
A182N s/n all (When equipped with 40-55);	40-55	Aux Wheel
A182N s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
A182N s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
A182N s/n all (When equipped with 40-77);	40-77	Aux Wheel
A182N s/n all (When equipped with 40-97A);	40-97A	Main Wheel
A182N s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F182P s/n all (When equipped with 40-113);	40-113	Main Wheel
F182P s/n all (When equipped with 40-77);	40-77	Aux Wheel
F182P s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
F182P s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F182P s/n all (When equipped with D-30580);	D-30580	Main Wheel
F182P s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F182P s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
F182Q s/n all (When equipped with 40-113);	40-113	Main Wheel
F182Q s/n all (When equipped with 40-77);	40-77	Aux Wheel
F182Q s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
F182Q s/n all (When equipped with D-30500);	D-30500	Aux Wheel
F182Q s/n all (When equipped with D-30580);	D-30580	Main Wheel
F182Q s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
F182Q s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
FR182 s/n all (When equipped with 40-77);	40-77	Aux Wheel
FR182 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
FR182 s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
R182 s/n all (When equipped with 40-77);	40-77	Aux Wheel
R182 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
R182 s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T182 s/n all (When equipped with 40-113);	40-113	Main Wheel

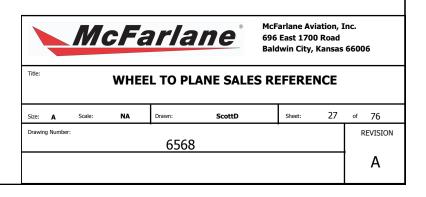


Rev Model and Serial Range T182 s/n all (When equipped with 40-77);	<u>Part Number</u> <u>Replaces</u> 40-77	<u>Location</u> Aux Wheel
T182 s/n all (When equipped with D-30291-6);	D-30291-6	Main Wheel
T182 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T182 s/n all (When equipped with D-30580);	D-30580	Main Wheel
T182 s/n all (When equipped with D-30660-1);	D-30660-1	Main Wheel
T182 s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T182T s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T182T s/n all (When equipped with 40-77);	40-77	Aux Wheel
TR182 s/n all (When equipped with 40-77);	40-77	Aux Wheel
TR182 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TR182 s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
185 s/n all (When equipped with 40-32);	40-32	Main Wheel
185 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185 s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185 s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185 s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
185A s/n all (When equipped with 40-32);	40-32	Main Wheel
185A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185A s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185A s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
185B s/n all (When equipped with 40-32);	40-32	Main Wheel
185B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185B s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185B s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185B s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
185C s/n all (When equipped with 40-32);	40-32	Main Wheel
185C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185C s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185C s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185C s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
185D s/n all (When equipped with 40-32);	40-32	Main Wheel
185D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185D s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185D s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185D s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel

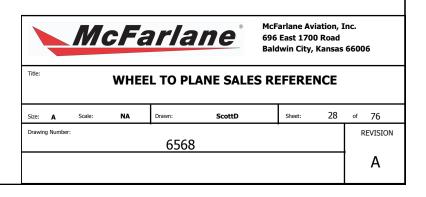


Rev Model and Serial Range 185E s/n all (When equipped with 40-32);	Part Number Replaces 40-32	<u>Location</u> Main Wheel
185E s/n all (When equipped with 40-75B);	40-75B	Main Wheel
185E s/n all (When equipped with 40-75D);	40-75D	Main Wheel
185E s/n all (When equipped with D-30291-1);	D-30291-1	Main Wheel
185E s/n all (When equipped with D-30291-3);	D-30291-3	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-32);	40-32	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-75B);	40-75B	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with 40-75D);	40-75D	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with D-30291-1);	D-30291-1	Main Wheel
A185E* s/n 185-0968 thru 185-1599 (When equipped with D-30291-3);	D-30291-3	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-32);	40-32	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-75B);	40-75B	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with 40-75D);	40-75D	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with D-30291-1);	D-30291-1	Main Wheel
A185E* s/n 18501600 thru 18502090 (When equipped with D-30291-3);	D-30291-3	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-32);	40-32	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-75B);	40-75B	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with 40-75D);	40-75D	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-1);	D-30291-1	Main Wheel
A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-3);	D-30291-3	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with 40-75B);	40-75B	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with 40-75D);	40-75D	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-1);	D-30291-1	Main Wheel




Rev Model and Serial Range A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-2);	<u>Part Number</u> <u>Replaces</u> D-30291-2	<u>Location</u> Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30291-3);	D-30291-3	Main Wheel
A185F* s/n 18502311 thru 18504448 (When equipped with D-30660-3);	D-30660-3	Main Wheel
188 s/n all (When equipped with 40-101);	40-101	Main Wheel
188 s/n all (When equipped with 40-101A);	40-101A	Main Wheel
188 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
188 s/n all (When equipped with 40-98A);	40-98A	Main Wheel
188A s/n all (When equipped with 40-101);	40-101	Main Wheel
188A s/n all (When equipped with 40-101A);	40-101A	Main Wheel
188A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
188A s/n all (When equipped with 40-98A);	40-98A	Main Wheel
188B s/n all (When equipped with 40-101);	40-101	Main Wheel
188B s/n all (When equipped with 40-101A);	40-101A	Main Wheel
188B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
188B s/n all (When equipped with 40-98A);	40-98A	Main Wheel
A188 s/n all (When equipped with 40-101);	40-101	Main Wheel
A188 s/n all (When equipped with 40-101A);	40-101A	Main Wheel
A188 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
A188 s/n all (When equipped with 40-98A);	40-98A	Main Wheel
A188A s/n all (When equipped with 40-101);	40-101	Main Wheel
A188A s/n all (When equipped with 40-101A);	40-101A	Main Wheel
A188A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
A188A s/n all (When equipped with 40-98A);	40-98A	Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-101);	40-101	Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-101A);	40-101A	Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-75B);	40-75B	Main Wheel
A188B* s/n 18800833 thru 18802348 (When equipped with 40-98A);	40-98A	Main Wheel
A188B* s/n 18802349 thru 18803973 (When equipped with 40-101);	40-101	Main Wheel
A188B* s/n 18802349 thru 18803973 (When equipped with 40-98A);	40-98A	Main Wheel

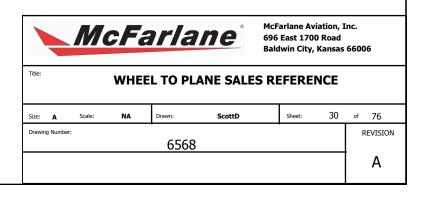


Rev Model and Serial Range A-188B s/n all (When equipped with 40-101);	Part Number Replaces 40-101	<u>Location</u> Main Wheel
A-188B s/n all (When equipped with 40-101A);	40-101A	Main Wheel
A-188B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
A-188B s/n all (When equipped with 40-98A);	40-98A	Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-101);	40-101	Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-101A);	40-101A	Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-75B);	40-75B	Main Wheel
A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-98A);	40-98A	Main Wheel
A188B (w/ large hopper)* s/n 18802349T thru 18803973T (When equipped with 40-101);	40-101	Main Wheel
A188B (w/ large hopper)* s/n 18802349T thru 18803973T (When equipped with 40-98A);	40-98A	Main Wheel
A-A188B s/n all (When equipped with 40-101);	40-101	Main Wheel
A-A188B s/n all (When equipped with 40-101A);	40-101A	Main Wheel
A-A188B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
A-A188B s/n all (When equipped with 40-98A);	40-98A	Main Wheel
T188C s/n all (When equipped with 40-101);	40-101	Main Wheel
T188C s/n all (When equipped with 40-98A);	40-98A	Main Wheel
210-5 (205) s/n all (When equipped with 40-55);	40-55	Aux Wheel
210-5 (205) s/n all (When equipped with 40-67);	40-67	Main Wheel
210-5 (205) s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210-5 (205) s/n all (When equipped with 40-76);	40-76	Aux Wheel
210-5 (205) s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
210-5 (205) s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
210-5 (205) s/n all (When equipped with 40-77);	40-77	Aux Wheel
210-5A (205A) s/n all (When equipped with 40-55);	40-55	Aux Wheel
210-5A (205A) s/n all (When equipped with 40-67);	40-67	Main Wheel
210-5A (205A) s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210-5A (205A) s/n all (When equipped with 40-76);	40-76	Aux Wheel
210-5A (205A) s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
210-5A (205A) s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
210-5A (205A) s/n all (When equipped with 40-77);	40-77	Aux Wheel
206 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
206 s/n all (When equipped with 40-75D);	40-75D	Main Wheel

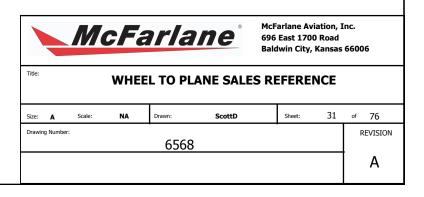


w Model and Serial Range	<u>Part Number</u> <u>Replaces</u>	<u>Location</u>
206 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
206 s/n all (When equipped with 40-77);	40-77	Aux Wheel
206 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
206 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
206H s/n all (When equipped with 40-75B);	40-75B	Main Wheel
206H s/n all (When equipped with 40-75D);	40-75D	Main Wheel
206H s/n all (When equipped with 40-75T);	40-75T	Main Wheel
206H s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206 s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206 s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P206 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
P206A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206A s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P206A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
P206B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206B s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206B s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206B s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P206B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
P206C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206C s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206C s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206C s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P206C s/n all (When equipped with D-30665);	D-30665	Aux Wheel
P206D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206D s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206D s/n all (When equipped with 40-77);	40-77	Aux Wheel

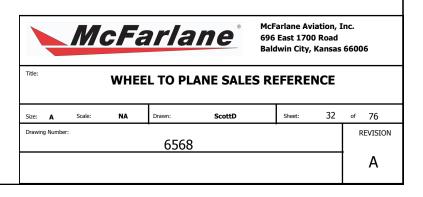


Rev Model and Serial Range P206D s/n all (When equipped with D-30500);	Part Number Replaces D-30500	<u>Location</u> Aux Wheel
P206D s/n all (When equipped with D-30665);	D-30665	Aux Wheel
P206E s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P206E s/n all (When equipped with 40-75D);	40-75D	Main Wheel
P206E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
P206E s/n all (When equipped with 40-77);	40-77	Aux Wheel
P206E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P206E s/n all (When equipped with D-30665);	D-30665	Aux Wheel
T206H s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T206H s/n all (When equipped with 40-75D);	40-75D	Main Wheel
T206H s/n all (When equipped with 40-75T);	40-75T	Main Wheel
T206H s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TP206A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TP206A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TP206A s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TP206A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TP206B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TP206B s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TP206B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TP206B s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206B s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TP206B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TP206C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TP206C s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TP206C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TP206C s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206C s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TP206C s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TP206D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TP206D s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TP206D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TP206D s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206D s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TP206D s/n all (When equipped with D-30665);	D-30665	Aux Wheel

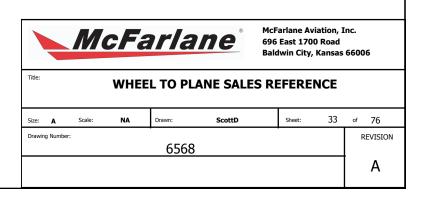


Rev Model and Serial Range TP206E s/n all (When equipped with 40-75B);	<u>Part Number</u> <u>Replaces</u> 40-75B	<u>Location</u> Main Wheel
TP206E s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TP206E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TP206E s/n all (When equipped with 40-77);	40-77	Aux Wheel
TP206E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TP206E s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TU206A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206A s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TU206B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206B s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206B s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206B s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TU206C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206C s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206C s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206C s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206C s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TU206D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206D s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206D s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206D s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206D s/n all (When equipped with D-30665);	D-30665	Aux Wheel
TU206E s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206E s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206E s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206E s/n all (When equipped with D-30665);	D-30665	Aux Wheel

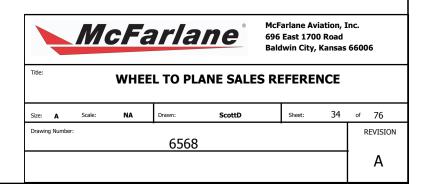


ev Model and Serial Range TU206F* s/n U20601701 thru U20602199 (When	<u>Part Number</u> <u>Replaces</u> 40-75B	<u>Location</u> Main Wheel
equipped with 40-75B);		
TU206F* s/n U20601701 thru U20602199 (When	40-75D	Main Wheel
equipped with 40-75D);		
TU206F* s/n U20601701 thru U20602199 (When equipped with 40-76A);	40-76A	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with 40-77);	40-77	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with D-30500);	D-30500	Aux Wheel
TU206F* s/n U20601701 thru U20602199 (When equipped with D-30665);	D-30665	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-75B);	40-75B	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-75D);	40-75D	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-76A);	40-76A	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with 40-77);	40-77	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30500);	D-30500	Aux Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);	D-30660-2	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30660-3);	D-30660-3	Main Wheel
TU206F* s/n U20602200 thru U20603521 (When equipped with D-30665);	D-30665	Aux Wheel
TU206G s/n all (When equipped with 40-75B);	40-75B	Main Wheel
TU206G s/n all (When equipped with 40-75D);	40-75D	Main Wheel
TU206G s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
TU206G s/n all (When equipped with 40-77);	40-77	Aux Wheel
TU206G s/n all (When equipped with D-30500);	D-30500	Aux Wheel
TU206G s/n all (When equipped with D-30660-2);	D-30660-2	Main Wheel
TU206G s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
TU206G s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206 s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206 s/n all (When equipped with 40-77);	40-77	Aux Wheel

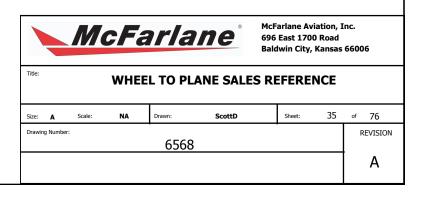

Model and Serial Range U206 s/n all (When equipped with D-30500);	Part Number Replaces D-30500	<u>Location</u> Aux Wheel
U206 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206A s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206B s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206B s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206B s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206C s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206C s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206C s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206C s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206D s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206D s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206D s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206D s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206E s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206E s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206E s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206E s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206E s/n all (When equipped with D-30665);	D-30665	Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-75B);	40-75B	Main Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with 40-75D);	40-75D	Main Wheel

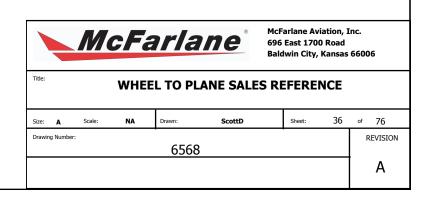


Rev Model and Serial Range U206F* s/n U20601701 thru U20602199 (When	Part Number Replaces 40-76A	<u>Location</u> Aux Wheel
equipped with 40-76A);		
U206F* s/n U20601701 thru U20602199 (When equipped with 40-77);	40-77	Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with D-30500);	D-30500	Aux Wheel
U206F* s/n U20601701 thru U20602199 (When equipped with D-30665);	D-30665	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-75B);	40-75B	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-75D);	40-75D	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-76A);	40-76A	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with 40-77);	40-77	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30500);	D-30500	Aux Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);	D-30660-2	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-3);	D-30660-3	Main Wheel
U206F* s/n U20602200 thru U20603521 (When equipped with D-30665);	D-30665	Aux Wheel
U206G s/n all (When equipped with 40-75B);	40-75B	Main Wheel
U206G s/n all (When equipped with 40-75D);	40-75D	Main Wheel
U206G s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
U206G s/n all (When equipped with 40-77);	40-77	Aux Wheel
U206G s/n all (When equipped with D-30500);	D-30500	Aux Wheel
U206G s/n all (When equipped with D-30660-2);	D-30660-2	Main Wheel
U206G s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
U206G s/n all (When equipped with D-30665);	D-30665	Aux Wheel
207 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
207 s/n all (When equipped with 40-75D);	40-75D	Main Wheel
207 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
207 s/n all (When equipped with 40-77);	40-77	Aux Wheel
207 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
207 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
207A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
207A s/n all (When equipped with 40-75D);	40-75D	Main Wheel

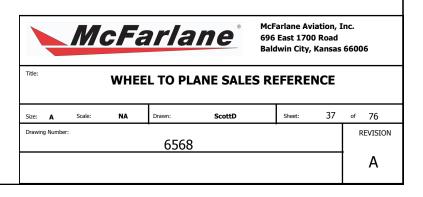

Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
207A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
207A s/n all (When equipped with 40-77);	40-77	Aux Wheel
207A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
207A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
T207 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T207 s/n all (When equipped with 40-75D);	40-75D	Main Wheel
T207 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
T207 s/n all (When equipped with 40-77);	40-77	Aux Wheel
T207 s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T207 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
T207A s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T207A s/n all (When equipped with 40-75D);	40-75D	Main Wheel
T207A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
T207A s/n all (When equipped with 40-77);	40-77	Aux Wheel
T207A s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T207A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
208 s/n all (When equipped with 40-177A);	40-177A	Aux Wheel
208 s/n all (When equipped with 40-179);	40-179	Main Wheel
208A s/n all (When equipped with 40-177A);	40-177A	Aux Wheel
208A s/n all (When equipped with 40-179);	40-179	Main Wheel
208B s/n all (When equipped with 40-177A);	40-177A	Aux Wheel
208B s/n all (When equipped with 40-179);	40-179	Main Wheel
210 s/n all (When equipped with 40-77);	40-77	Aux Wheel
210A s/n all (When equipped with 40-77);	40-77	Aux Wheel
210B s/n all (When equipped with 40-68);	40-68	Aux Wheel
210B s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210B s/n all (When equipped with 40-77);	40-77	Aux Wheel
210C s/n all (When equipped with 40-68);	40-68	Aux Wheel
210C s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210C s/n all (When equipped with 40-77);	40-77	Aux Wheel
210D s/n all (When equipped with 40-68);	40-68	Aux Wheel
210D s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210D s/n all (When equipped with 40-77);	40-77	Aux Wheel
210E s/n all (When equipped with 40-68);	40-68	Aux Wheel
210E s/n all (When equipped with 40-75B);	40-75B	Main Wheel




<ul> <li>Model and Serial Range</li> <li>210E s/n all (When equipped with 40-77);</li> </ul>	Part Number Replaces 40-77	<u>Location</u> Aux Wheel
210F s/n all (When equipped with 40-68);	40-68	Aux Wheel
210F s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210F s/n all (When equipped with 40-77);	40-77	Aux Wheel
210G s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210G s/n all (When equipped with 40-77);	40-77	Aux Wheel
210H s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210H s/n all (When equipped with 40-77);	40-77	Aux Wheel
210J s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210J s/n all (When equipped with 40-77);	40-77	Aux Wheel
210K s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210K s/n all (When equipped with 40-77);	40-77	Aux Wheel
210K s/n all (When equipped with D-30500);	D-30500	Aux Wheel
210K s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
210L s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210L s/n all (When equipped with 40-77);	40-77	Aux Wheel
210L s/n all (When equipped with D-30500);	D-30500	Aux Wheel
210L s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
210M s/n all (When equipped with 40-75B);	40-75B	Main Wheel
210M s/n all (When equipped with 40-77);	40-77	Aux Wheel
210M s/n all (When equipped with D-30500);	D-30500	Aux Wheel
210M s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);	40-75B	Main Wheel
210N* s/n 21062955 thru 21064135 (When equipped with 40-77);	40-77	Aux Wheel
210N* s/n 21062955 thru 21064135 (When equipped with D-30500);	D-30500	Aux Wheel
210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);	D-30660-3	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with 40-142);	40-142	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with 40-75B);	40-75B	Main Wheel
210N* s/n 21064136 thru 21064897 (When equipped with D-30500);	D-30500	Aux Wheel
210R s/n all (When equipped with 40-142);	40-142	Main Wheel

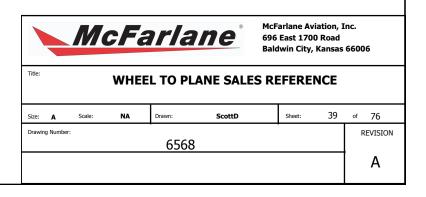

<ul><li>Model and Serial Range</li><li>210R s/n all (When equipped with 40-75B);</li></ul>	<u>Part Number</u> <u>Replaces</u> 40-75B	<u>Location</u> Main Wheel
210R s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P210N s/n all (When equipped with 40-142);	40-142	Main Wheel
P210N s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P210N s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P210N s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
P210R s/n all (When equipped with 40-142);	40-142	Main Wheel
P210R s/n all (When equipped with 40-75B);	40-75B	Main Wheel
P210R s/n all (When equipped with D-30500);	D-30500	Aux Wheel
P210R s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T210F s/n all (When equipped with 40-68);	40-68	Aux Wheel
T210F s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210F s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210G s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210G s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210H s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210H s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210J s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210J s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210K s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210K s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210K s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T210K s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T210L s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210L s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210L s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T210L s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T210M s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210M s/n all (When equipped with 40-77);	40-77	Aux Wheel
T210M s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T210M s/n all (When equipped with D-30660-3);	D-30660-3	Main Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);	40-75B	Main Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with 40-77);	40-77	Aux Wheel




<ul> <li>Model and Serial Range</li> <li>T210N* s/n 21062955 thru 21064135 (When equipped with D-30500);</li> </ul>	Part Number Replaces D-30500	<u>Location</u> Aux Wheel
T210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);	D-30660-3	Main Wheel
T210N* s/n 21064136 thru 21064897 (When equipped with 40-142);	40-142	Main Wheel
T210N* s/n 21064136 thru 21064897 (When equipped with 40-75B);	40-75B	Main Wheel
T210N* s/n 21064136 thru 21064897 (When equipped with D-30500);	D-30500	Aux Wheel
T210R s/n all (When equipped with 40-142);	40-142	Main Wheel
T210R s/n all (When equipped with 40-75B);	40-75B	Main Wheel
T210R s/n all (When equipped with D-30500);	D-30500	Aux Wheel
T303 s/n all (When equipped with 40-142);	40-142	Main Wheel
T303 s/n all (When equipped with 40-98H);	40-98H	Main Wheel
310R s/n all (When equipped with 40-40A);	40-40A	Main Wheel
310R s/n all (When equipped with D-30665);	D-30665	Aux Wheel
T310R s/n all (When equipped with 40-40A);	40-40A	Main Wheel
T310R s/n all (When equipped with D-30665);	D-30665	Aux Wheel
335 s/n all (When equipped with 40-40A);	40-40A	Main Wheel
335 s/n all (When equipped with 40-40D);	40-40D	Main Wheel
336 s/n all (When equipped with 40-55);	40-55	Aux Wheel
336 s/n all (When equipped with 40-67);	40-67	Main Wheel
336 s/n all (When equipped with 40-75B);	40-75B	Main Wheel
336 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
336 s/n all (When equipped with 40-76B);	40-76B	Aux Wheel
337 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337 s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337A (USAF O2B) s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337A (USAF O2B) s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337B s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337C s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel

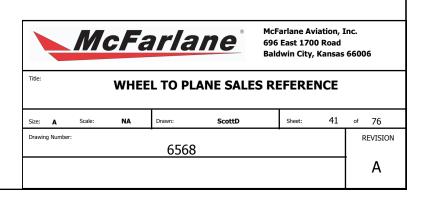

Rev Model and Serial Range 337D s/n all (When equipped with 40-96E);	Part Number Replaces 40-96E	<u>Location</u> Main Wheel
337E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337E s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337E s/n all (When equipped with 40-98A);	40-98A	Main Wheel
337F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337F s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337F s/n all (When equipped with 40-98A);	40-98A	Main Wheel
337G s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337G s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337G s/n all (When equipped with 40-98A);	40-98A	Main Wheel
337G s/n all (When equipped with D-30665);	D-30665	Aux Wheel
337H s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
337H s/n all (When equipped with 40-96E);	40-96E	Main Wheel
337H s/n all (When equipped with 40-98A);	40-98A	Main Wheel
337H s/n all (When equipped with D-30665);	D-30665	Aux Wheel
F337E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
F337E s/n all (When equipped with 40-96E);	40-96E	Main Wheel
F337E s/n all (When equipped with 40-98A);	40-98A	Main Wheel
F337F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
F337F s/n all (When equipped with 40-96E);	40-96E	Main Wheel
F337F s/n all (When equipped with 40-98A);	40-98A	Main Wheel
F337G s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
F337G s/n all (When equipped with 40-96E);	40-96E	Main Wheel
F337G s/n all (When equipped with 40-98A);	40-98A	Main Wheel
F337G s/n all (When equipped with D-30665);	D-30665	Aux Wheel
F337H s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
F337H s/n all (When equipped with 40-96E);	40-96E	Main Wheel
F337H s/n all (When equipped with 40-98A);	40-98A	Main Wheel
F337H s/n all (When equipped with D-30665);	D-30665	Aux Wheel
FT337E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
FT337E s/n all (When equipped with 40-96E);	40-96E	Main Wheel
FT337E s/n all (When equipped with 40-98A);	40-98A	Main Wheel
FT337F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
FT337F s/n all (When equipped with 40-96E);	40-96E	Main Wheel
FT337F s/n all (When equipped with 40-98A);	40-98A	Main Wheel




Rev Model and Serial Range M337B (USAF O2A) s/n all (When equipped with	<u>Part Number</u> <u>Replaces</u> 40-76A	Location Aux Wheel  Main Wheel	
40-76A); M337B (USAF O2A) s/n all (When equipped with 40-96E);	40-96E		
T337B s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337B s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337C s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337C s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337D s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337D s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337E s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337E s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337E s/n all (When equipped with 40-98A);	40-98A	Main Wheel	
T337F s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337F s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337F s/n all (When equipped with 40-98A);	40-98A	Main Wheel	
T337H s/n all (When equipped with 40-76A);	40-76A	Aux Wheel	
T337H s/n all (When equipped with 40-96E);	40-96E	Main Wheel	
T337H s/n all (When equipped with 40-98A);	40-98A	Main Wheel	
T337H s/n all (When equipped with D-30665);	D-30665	Aux Wheel	
340 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel	
340 s/n all (When equipped with 40-40A);	40-40A	Main Wheel	
340 s/n all (When equipped with 40-40D);	40-40D	Main Wheel	
340 s/n all (When equipped with D-30665);	D-30665	Aux Wheel	
340A s/n all (When equipped with 40-140A);	40-140A	Aux Wheel	
340A s/n all (When equipped with 40-40A);	40-40A	Main Wheel	
340A s/n all (When equipped with 40-40D);	40-40D	Main Wheel	
340A s/n all (When equipped with D-30665);	D-30665	Aux Wheel	
401 s/n all (When equipped with 40-135A);	40-135A	Main Wheel	
401 s/n all (When equipped with 40-40A);	40-40A	Main Wheel	
401 s/n all (When equipped with D-30665);	D-30665	Aux Wheel	
401A s/n all (When equipped with 40-135A);	40-135A	Main Wheel	
401A s/n all (When equipped with 40-40A);	40-40A	Main Wheel	
401A s/n all (When equipped with D-30665);	D-30665	Aux Wheel	
401B s/n all (When equipped with 40-135A);	40-135A	Main Wheel	
401B s/n all (When equipped with 40-40A);	40-40A	Main Wheel	

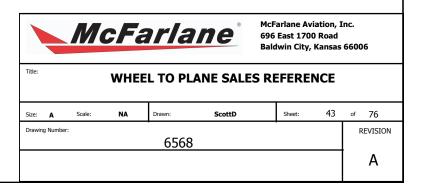

New Model and Serial Range 401B s/n all (When equipped with D-30665);	Part Number Replaces D-30665	<u>Location</u> Aux Wheel
402 s/n all (When equipped with 40-135A);	40-135A	Main Wheel
402 s/n all (When equipped with 40-40A);	40-40A	Main Wheel
402 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
402A s/n all (When equipped with 40-135A);	40-135A	Main Wheel
402A s/n all (When equipped with 40-40A);	40-40A	Main Wheel
402A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
402B s/n all (When equipped with 40-135A);	40-135A	Main Wheel
402B s/n all (When equipped with 40-40A);	40-40A	Main Wheel
402B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
402C s/n all (When equipped with 40-135A);	40-135A	Main Wheel
402C s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
404 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
404 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
406 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
F406* s/n F406-0001 thru F406-9999 (When equipped with 40-140A);	40-140A	Aux Wheel
411 s/n all (When equipped with 40-40A);	40-40A	Main Wheel
411 s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
411A s/n all (When equipped with 40-40A);	40-40A	Main Wheel
411A s/n all (When equipped with 40-76A);	40-76A	Aux Wheel
414 s/n all (When equipped with 40-135A);	40-135A	Main Wheel
414 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
414 s/n all (When equipped with 40-40A);	40-40A	Main Wheel
414 s/n all (When equipped with 40-40D);	40-40D	Main Wheel
414 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
414A s/n all (When equipped with 40-135A);	40-135A	Main Wheel
414A s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
414A s/n all (When equipped with 40-40A);	40-40A	Main Wheel
414A s/n all (When equipped with 40-40D);	40-40D	Main Wheel
414A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
421 s/n all (When equipped with D-30665);	D-30665	Aux Wheel
421A s/n all (When equipped with D-30665);	D-30665	Aux Wheel
421B s/n all (When equipped with D-30665);	D-30665	Aux Wheel
421C s/n all (When equipped with 40-135A);	40-135A	Main Wheel



www.wodel and Serial Range 421C s/n all (When equipped with 40-140A);	Part Number Replaces 40-140A	<u>Location</u> Aux Wheel
421C s/n all (When equipped with D-30665);	D-30665	Aux Wheel
425 s/n all (When equipped with 40-138A);	40-138A	Main Wheel
425 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
441 s/n all (When equipped with 40-140A);	40-140A	Aux Wheel
7AC s/n all (When equipped with wheel 3050);	3050	Main Wheel
7AC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7ACA s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
7ACA s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
7BCM (L-16A) s/n all (When equipped with wheel 3050);	3050	Main Wheel
7BCM (L-16A) s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7CCM (L-16B) s/n all (When equipped with wheel 3050);	3050	Main Wheel
7CCM (L-16B) s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7DC s/n all (When equipped with wheel 3050);	3050	Main Wheel
7DC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7EC s/n all (When equipped with wheel 21-100D);	21-100D	Aux Wheel
7EC s/n all (When equipped with wheel 3040);	3040	Main Wheel
7EC s/n all (When equipped with wheel 3050);	3050	Main Wheel
7EC s/n all (When equipped with wheel 40-2);	40-2	Aux Wheel
7EC s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
7EC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7EC s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
7ECA s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
7FC s/n all (When equipped with wheel 3040);	3040	Main Wheel
7FC s/n all (When equipped with wheel 40-2);	40-2	Aux Wheel
7FC s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
7GC s/n all (When equipped with wheel 3050);	3050	Main Wheel
7GC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
7GCA s/n all (When equipped with wheel 3040);	3040	Main Wheel
7GCA s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
7GCAA s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
7GCB s/n all (When equipped with wheel 3040);	3040	Main Wheel

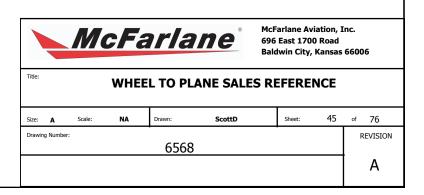

Rev Model and Serial Range 7GCB s/n all (When equipped with wheel 40-6);	<u>Part Number</u> <u>Replaces</u> 40-6	<u>Location</u> Main Wheel
7GCBA s/n all (When equipped with wheel 3040);	3040	Main Wheel
7GCBA s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
7GCBC s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
7JC s/n all (When equipped with wheel 3040);	3040	Main Wheel
7JC s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
7KC s/n all (When equipped with wheel 3040);	3040	Main Wheel
7KC s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
7KCAB s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
7SRS s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
S7AC s/n all (When equipped with wheel 3050);	3050	Main Wheel
S7AC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
S7CCM s/n all (When equipped with wheel 3050);	3050	Main Wheel
S7CCM s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
S7DC s/n all (When equipped with wheel 3050);	3050	Main Wheel
S7DC s/n all (When equipped with wheel 40-7);	40-7	Main Wheel
8GCBC s/n all (When equipped with wheel 40-47);	40-47	Main Wheel
8KCAB s/n all (When equipped with wheel 40-28D);	40-28D	Main Wheel
SR20 s/n all (When equipped with wheel 40-406);	40-406	Main Wheel
SR20 s/n all (When equipped with wheel 40-414);	40-414	Main Wheel
SR20 s/n all (When equipped with wheel 40-75P);	40-75P	Main Wheel
SR20 s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
SR22 s/n all (When equipped with wheel 40-406);	40-406	Main Wheel
SR22 s/n all (When equipped with wheel 40-75P);	40-75P	Main Wheel
SR22 s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
DA 40 s/n all (When equipped with wheel 40-414A);	40-414A	Main Wheel
DA 40 s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
DA 40F s/n all (When equipped with wheel 40-414A);	40-414A	Main Wheel
DA 40F s/n all (When equipped with wheel 40-77);	40-77	Aux Wheel
DA 42 s/n all (When equipped with wheel 40-75Z);	40-75Z	Main Wheel
DA 42 M-NG s/n all (When equipped with wheel 40-75Z);	40-75Z	Main Wheel
DA 42 NG s/n all (When equipped with wheel 40-75Z);	40-75Z	Main Wheel




Rev Model and Serial Range DA20-A1 s/n all (When equipped with wheel 40-78E);	Part Number Replaces 40-78E	<u>Location</u> Main Wheel
DA20-C1 s/n all (When equipped with wheel 40-78E);	40-78E	Main Wheel
415-C s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
415-CD s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
415-D s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
A-2 s/n all (When equipped with wheel 40-97A);	40-97A	Main Wheel
A-2A s/n all (When equipped with wheel 40-97A);	40-97A	Main Wheel
E s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
F-1 s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
F-1A s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
G s/n all (When equipped with wheel 40-41);	40-41	Main Wheel
M10 s/n all (When equipped with wheel 40-97);	40-97	Main Wheel
M10 s/n all (When equipped with wheel 40-97A);	40-97A	Main Wheel
G-73 s/n all (When equipped with wheel 40-174);	40-174	Main Wheel
AA-1 s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-1 s/n all (When equipped with wheel 40-86A);	40-86A	Main Wheel
AA-1 s/n all (When equipped with wheel 40-88C);	40-88C	Main Wheel
AA-1A s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-1A s/n all (When equipped with wheel 40-86A);	40-86A	Main Wheel
AA-1A s/n all (When equipped with wheel 40-88C);	40-88C	Main Wheel
AA-1B s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-1B s/n all (When equipped with wheel 40-86A);	40-86A	Main Wheel
AA-1B s/n all (When equipped with wheel 40-88C);	40-88C	Main Wheel
AA-5 s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-5 s/n all (When equipped with wheel 40-86A);	40-86A	Main Wheel
AA-5A s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-5A s/n all (When equipped with wheel 40-88C);	40-88C	Main Wheel
AA-5B s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
AA-5B s/n all (When equipped with wheel 40-88C);	40-88C	Main Wheel
G-164 s/n all (When equipped with wheel 40-112);	40-112	Aux Wheel
G-164 s/n all (When equipped with wheel 40-47);	40-47	Main Wheel
G-164A s/n all (When equipped with wheel 40-101);	40-101	Main Wheel
G-164A s/n all (When equipped with wheel 40-112);	40-112	Aux Wheel
G-164B s/n all (When equipped with wheel 40-112);	40-112	Aux Wheel

	McFarlane Avia 696 East 1700 Baldwin City, I				700 Road			
Title:			WHE	EL TO P	LANE SALE	S REFE	RENCE	
Size:	A	Scale:	NA	Drawn:	ScottD	Sheet	47	of 76
Drawin	g Numb	er:		656	8	-		REVISION
								Α


Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
G-164B s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164B-15T s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164B-15T s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164B-20T s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164B-20T s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164B-34T s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164B-34T s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164C s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164C s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164D s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164D s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-164D with 73" wing gap s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
G-164D with 73" wing gap s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
G-21 (OA-9,JRF-1,JRF-2,JRF-4,JRF-5,JRF-6B) s/n all (When equipped with wheel 40-127);	40-127		Main Wheel
G-21A (OA-9,JRF-1,JRF-2,JRF-4,JRF-5,JRF-6B) s/n all (When equipped with wheel 40-127);	40-127		Main Wheel
G-44 (OA-14,J4F-2) s/n all (When equipped with wheel 40-46);	40-46		Main Wheel
G-44A s/n all (When equipped with wheel 40-46);	40-46		Main Wheel
SCAN TYPE 30 s/n all (When equipped with wheel 40-46);	40-46		Main Wheel
GA-7 s/n all (When equipped with wheel 40-76G);	40-76G		Aux Wheel
GA-7 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
Bee Dee M-4 s/n all (When equipped with wheel 3040);	3040		Main Wheel
Bee Dee M-4 s/n all (When equipped with wheel 40-6);	40-6		Main Wheel
Bee Dee M-4 s/n all (When equipped with wheel 40-97D);	40-97D		Main Wheel



<ul> <li>Model and Serial Range</li> <li>M-4 s/n all (When equipped with wheel 3040);</li> </ul>	Part Number Replaces 3040	<u>Location</u> Main Wheel
M-4 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-180C s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-180C s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-180C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-180S s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-180S s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-180S s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-180T s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-180T s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-180T s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-180V s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-180V s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-180V s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-210 s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-210 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-210 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-210C s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-210C s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-210C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-210S s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-210S s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-210S s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-210T s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-210T s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-210T s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-220 s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-220 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-220 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-220C s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-220C s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-220C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel

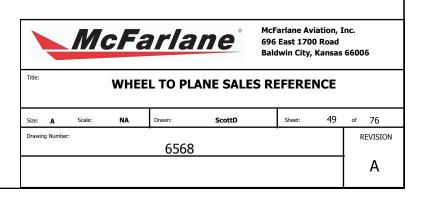

Rev Model and Serial Range M-4-220S s/n all (When equipped with wheel 3040);	Part Number Replaces 3040	<u>Location</u> Main Wheel
M-4-220S s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-220S s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4-220T s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4-220T s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4-220T s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4C s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4C s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4S s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4S s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4S s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-4T s/n all (When equipped with wheel 3040);	3040	Main Wheel
M-4T s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M-4T s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-180C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-200 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-210C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-210TC s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-220C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-5-235C s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-6-180 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-6-235 s/n all (When equipped with wheel 40-97D);	40-97D	Main Wheel
M-7-235 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-235A s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-235B s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-235C s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-260 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-260C s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel

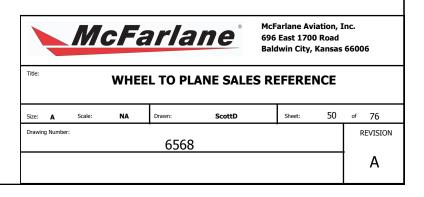

Rev Model and Serial Range	Part Number Replaces	<u>Location</u>
M-7-420A s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-7-420AC s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MT-7-235 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MT-7-260 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MT-7-420 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-160 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-160C s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-180 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-180A s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-180AC s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-180B s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-180C s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-235 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MX-7-420 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MXT-7-160 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MXT-7-180 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
MXT-7-180 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
MXT-7-180A s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M-8-235 s/n all (When equipped with wheel 40-75D);	40-75D	Main Wheel
M20 s/n all (When equipped with wheel 3040);	3040	Main Wheel
M20 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
M20 s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20 s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20A s/n all (When equipped with wheel 3040);	3040	Main Wheel
M20A s/n all (When equipped with wheel 40-24);	40-24	Main Wheel
M20A s/n all (When equipped with wheel 40-33);	40-33	Aux Wheel



Rev Model and Serial Range M20A s/n all (When equipped with wheel 40-6);	Part Number Replaces 40-6	<u>Location</u> Main Wheel
M20A s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20A s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20B s/n all (When equipped with wheel 40-24);	40-24	Main Wheel
M20B s/n all (When equipped with wheel 40-33);	40-33	Aux Wheel
M20B s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20B s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20C s/n all (When equipped with wheel 40-24);	40-24	Main Wheel
M20C s/n all (When equipped with wheel 40-33);	40-33	Aux Wheel
M20C s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20C s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20C s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20D s/n all (When equipped with wheel 40-24);	40-24	Main Wheel
M20D s/n all (When equipped with wheel 40-33);	40-33	Aux Wheel
M20D s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20D s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20E s/n all (When equipped with wheel 40-24);	40-24	Main Wheel
M20E s/n all (When equipped with wheel 40-33);	40-33	Aux Wheel
M20E s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20E s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20E s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20F s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20F s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20F s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20G s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20G s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20G s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20J s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20J s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20J s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20K s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
M20K s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20K s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20L s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
M20L s/n all (When equipped with wheel 40-87);	40-87	Aux Wheel
M20M s/n all (When equipped with wheel 40-86E);	40-86E	Main Wheel
, , , , , , , , , , , , , , , , , , , ,		



Rev Mo	odel and Serial Range	Part Number	Replaces	<u>Location</u>
M2	20M s/n all (When equipped with wheel 40-87);	40-87		Aux Wheel
M2	20M s/n all (When equipped with wheel 40-90A);	40-90A		Main Wheel
M2	20R s/n all (When equipped with wheel 40-86E);	40-86E		Main Wheel
M2	20R s/n all (When equipped with wheel 40-87);	40-87		Aux Wheel
M2	20S s/n all (When equipped with wheel 40-86E);	40-86E		Main Wheel
M2	20S s/n all (When equipped with wheel 40-87);	40-87		Aux Wheel
M2	20TN s/n all (When equipped with wheel 40-86E);	40-86E		Main Wheel
M2	20TN s/n all (When equipped with wheel 40-87);	40-87		Aux Wheel
J-3	3 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
	(Converted TG-8 Glider) s/n all (When equipped th wheel 40-60);	40-60		Main Wheel
PA	x-11 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
PA	x-12 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
PA	x-14 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
PA	x-16 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
PA	-18 s/n all (When equipped with wheel 40-60);	40-60		Main Wheel
PA	n-18 s/n all (When equipped with wheel 40-84);	40-84		Main Wheel
PA	a-18 s/n all (When equipped with wheel 40-84B);	40-84B		Main Wheel
	n-18 "105" (Special) s/n all (When equipped with leel 40-84B);	40-84B		Main Wheel
	n-18 "125" (Army L-21A) s/n all (When equipped th wheel 40-84B);	40-84B		Main Wheel
	n-18 "135" (Army L-21B) s/n all (When equipped th wheel 40-84B);	40-84B		Main Wheel
	n-18 "150"* s/n 18-3771 thru 18-8309025 (When uipped with wheel 40-60);	40-60		Main Wheel
	uipped with wheel 40-84B);	40-84B		Main Wheel
	n-18 "150"* s/n 1809001 thru 1809113 (When uipped with wheel 40-60);	40-60		Main Wheel
	n-18 "150"* s/n 1809001 thru 1809113 (When uipped with wheel 40-84B);	40-84B		Main Wheel
PA	n-18A s/n all (When equipped with wheel 40-84B);	40-84B		Main Wheel
	n-18A "135" s/n all (When equipped with wheel -84B);	40-84B		Main Wheel



Rev Model and Serial Range PA-18A "150" s/n all (When equipped with wheel 40-60);	Part Number Replaces 40-60	<u>Location</u> Main Wheel
PA-18A "150" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18AS "125" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18AS "135" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18AS "150" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S "105" (Special) s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S "125" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S "135" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S "150"* s/n 18-3771 thru 18-8309025 (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-18S "150"* s/n 1809001 thru 1809113 (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20 s/n all (When equipped with wheel 40-60);	40-60	Main Wheel
PA-20 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-20 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20 "115" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20 "135" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20S s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20S "115" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-20S "135" s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22 s/n all (When equipped with wheel 3040);	3040	Main Wheel
PA-22 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-22 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-22 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
PA-22 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel



<ul> <li><u>Model and Serial Range</u></li> <li>PA-22 s/n all (When equipped with wheel 40-8);</li> </ul>	<u>Part Number</u> <u>Replaces</u> 40-8	<u>Location</u> Aux Wheel
PA-22 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-22 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22-108 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-22-108 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-22-108 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22-135 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-22-135 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-22-135 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-22-135 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-22-135 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22-150 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-22-150 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-22-150 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-22-150 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-22-150 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22-160 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-22-160 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-22-160 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-22-160 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-22-160 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22S-135 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22S-150 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-22S-160 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-23 s/n all (When equipped with wheel 3080A);	3080A	Main Wheel
PA-23 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-23 s/n all (When equipped with wheel 40-3);	40-3	Main Wheel
PA-23 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel



v Model and Serial Range PA-23 s/n all (When equipped with wheel 40-8);	<u>Part Number</u> <u>Replaces</u> 40-8	<u>Location</u> Aux Wheel
PA-23-160 s/n all (When equipped with wheel 3080A);	3080A	Main Wheel
PA-23-160 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-23-160 s/n all (When equipped with wheel 40-3);	40-3	Main Wheel
PA-23-160 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-23-160 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-23-235 s/n all (When equipped with wheel 3080B);	3080B	Main Wheel
PA-23-235 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-23-235 s/n all (When equipped with wheel 40-4);	40-4	Main Wheel
PA-23-235 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-23-235 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 3080D);	3080D	Main Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 40-116);	40-116	Main Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 40-131);	40-131	Main Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-23-250 (Navy UO-1) s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-E23-250 s/n all (When equipped with wheel 3080D);	3080D	Main Wheel
PA-E23-250 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-E23-250 s/n all (When equipped with wheel 40-116);	40-116	Main Wheel
PA-E23-250 s/n all (When equipped with wheel 40-131);	40-131	Main Wheel
PA-E23-250 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-E23-250 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-24 s/n all (When equipped with wheel 3070);	3070	Main Wheel
PA-24 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-24 s/n all (When equipped with wheel 40-5);	40-5	Main Wheel
PA-24 s/n all (When equipped with wheel 40-58);	40-58	Main Wheel




v Model and Serial Range PA-24 s/n all (When equipped with wheel 40-8);	<u>Part Number</u> <u>Replaces</u> 40-8	<u>Location</u> Aux Wheel
PA-24 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-24-250 s/n all (When equipped with wheel 3070);	3070	Main Wheel
PA-24-250 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-24-250 s/n all (When equipped with wheel 40-5);	40-5	Main Wheel
PA-24-250 s/n all (When equipped with wheel 40-58);	40-58	Main Wheel
PA-24-250 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-24-250 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-24-260 s/n all (When equipped with wheel 3070);	3070	Main Wheel
PA-24-260 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-24-260 s/n all (When equipped with wheel 40-5);	40-5	Main Wheel
PA-24-260 s/n all (When equipped with wheel 40-58);	40-58	Main Wheel
PA-24-260 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-24-260 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-24-260 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-24-400 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-24-400 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-24-400 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
PA-25-235* s/n 25-2000 thru 25-8156024 (When equipped with wheel 40-61);	40-61	Main Wheel
PA-25-235* s/n 25-2000 thru 25-8156024 (When equipped with wheel 40-84A);	40-84A	Main Wheel
PA-25-260* s/n 25-4415 thru 25-8156024 (When equipped with wheel 40-84A);	40-84A	Main Wheel
PA-28-140 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-28-140 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-28-140 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-28-140 s/n all (When equipped with wheel 40-76F);	40-76F	Aux Wheel
PA-28-140 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-28-140 s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
PA-28-140 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-140 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-150 s/n all (When equipped with wheel 38501);	38501	Aux Wheel




/ <u>Model and Serial Range</u> PA-28-150 s/n all (When equipped with wheel 40-28);	<u>Part Number</u> <u>Replaces</u> 40-28	<u>Location</u> Main Wheel
PA-28-150 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-28-150 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-150 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-151 s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
PA-28-151 s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28-151 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-151 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-151 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28-160 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-28-160 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel
PA-28-160 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-28-160 s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
PA-28-160 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-160 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-161* s/n 28-7716001 thru 28-8616057 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28-161* s/n 28-7716001 thru 28-8616057 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-161* s/n 28-7716001 thru 28-8616057 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-161* s/n 28-7716001 thru 28-8616057 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28-161* s/n 2816001 thru 2816119 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28-161* s/n 2816001 thru 2816119 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-161* s/n 2816001 thru 2816119 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-161* s/n 2816001 thru 2816119 (When equipped with wheel D-30500);	D-30500	Aux Wheel




Rev Model and Serial Range PA-28-161* s/n 2841001 thru 2841365 (When equipped with wheel 40-77B);	Part Number 40-77B	Replaces	<u>Location</u> Aux Wheel
PA-28-161* s/n 2841001 thru 2841365 (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-161* s/n 2841001 thru 2841365 (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-161* s/n 2841001 thru 2841365 (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-28-161* s/n 2842001 thru 2842999 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-28-161* s/n 2842001 thru 2842999 (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-161* s/n 2842001 thru 2842999 (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-161* s/n 2842001 thru 2842999 (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-28-180 s/n all (When equipped with wheel 38501);	38501		Aux Wheel
PA-28-180 s/n all (When equipped with wheel 40-28);	40-28		Main Wheel
PA-28-180 s/n all (When equipped with wheel 40-76B);	40-76B		Aux Wheel
PA-28-180 s/n all (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-28-180 s/n all (When equipped with wheel 40-8);	40-8		Aux Wheel
PA-28-180 s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
PA-28-180 s/n all (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-180 s/n all (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-180 s/n all (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-28-181* s/n 28-7690001 thru 28-8690062 (When equipped with wheel 40-56);	40-56		Aux Wheel
PA-28-181* s/n 28-7690001 thru 28-8690062 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-28-181* s/n 28-7690001 thru 28-8690062 (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-28-181* s/n 28-7690001 thru 28-8690062 (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-181* s/n 28-7690001 thru 28-8690062 (When equipped with wheel 40-86F);	40-86F		Main Wheel

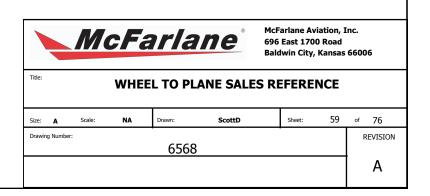


Rev Model and Serial Range PA-28-181* s/n 2890001 thru 2890231 (When equipped with wheel 40-56);	<u>Part Number</u> 40-56	<u>Replaces</u>	<u>Location</u> Aux Wheel
PA-28-181* s/n 2890001 thru 2890231 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-28-181* s/n 2890001 thru 2890231 (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-28-181* s/n 2890001 thru 2890231 (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-181* s/n 2890001 thru 2890231 (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-181* s/n 2843001 thru 2843999 (When equipped with wheel 40-56);	40-56		Aux Wheel
PA-28-181* s/n 2843001 thru 2843999 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-28-181* s/n 2843001 thru 2843999 (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-28-181* s/n 2843001 thru 2843999 (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-181* s/n 2843001 thru 2843999 (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-201T s/n all (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-28-201T s/n all (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-201T s/n all (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-201T s/n all (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-28-235 s/n all (When equipped with wheel 40-58);	40-58		Main Wheel
PA-28-235 s/n all (When equipped with wheel 40-76B);	40-76B		Aux Wheel
PA-28-235 s/n all (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-28-235 s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
PA-28-235 s/n all (When equipped with wheel 40-86B);	40-86B		Main Wheel
PA-28-235 s/n all (When equipped with wheel 40-86F);	40-86F		Main Wheel
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel 40-56);	40-56		Aux Wheel
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel 40-56B);	40-56B		Aux Wheel

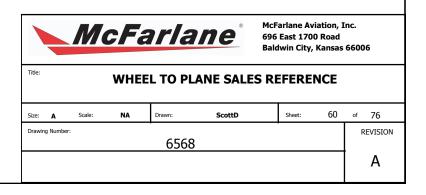


w Model and Serial Range	Part Number F	Replaces Location
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-28-236* s/n 28-7911001 thru 28-8611008 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel 40-56);	40-56	Aux Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-28-236* s/n 2811001 thru 2811050 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel 40-56);	40-56	Aux Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-28-236* s/n 2845001 thru 2845999 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-28R-180 s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
PA-28R-180 s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-180 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-28R-180 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-28R-180 s/n all (When equipped with wheel 40-86);	40-86	Main Wheel

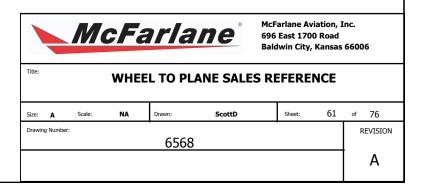


Model and Serial Range PA-28R-180 s/n all (When equipped with wheel 40-86B);	<u>Part Number</u> <u>Replaces</u> 40-86B	<u>Location</u> Main Wheel
PA-28R-180 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-180 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-200 s/n all (When equipped with wheel 40-77A);	40-77A	Aux Wheel
PA-28R-200 s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-200 s/n all (When equipped with wheel 40-84);	40-84	Main Wheel
PA-28R-200 s/n all (When equipped with wheel 40-84B);	40-84B	Main Wheel
PA-28R-200 s/n all (When equipped with wheel 40-86);	40-86	Main Wheel
PA-28R-200 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28R-200 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-200 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-201* s/n 28R-7737002 thru 28R-7837317 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-201* s/n 28R-7737002 thru 28R-7837317 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28R-201* s/n 28R-7737002 thru 28R-7837317 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-201* s/n 28R-7737002 thru 28R-7837317 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-201* s/n 2837001 thru 2837061 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-201* s/n 2837001 thru 2837061 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28R-201* s/n 2837001 thru 2837061 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-201* s/n 2837001 thru 2837061 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-201* s/n 2844001 thru 2844999 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-201* s/n 2844001 thru 2844999 (When equipped with wheel 40-86B);	40-86B	Main Wheel

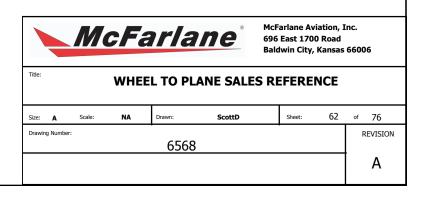

ev Model and Serial Range PA-28R-201* s/n 2844001 thru 2844999 (When equipped with wheel 40-86F);	<u>Part Number</u> <u>Replace</u> 40-86F	<u>Location</u> Main Wheel
PA-28R-201* s/n 2844001 thru 2844999 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-201T* s/n 28R-7703001 thru 28R-7803373 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-201T* s/n 28R-7703001 thru 28R-7803373 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28R-201T* s/n 28R-7703001 thru 28R-7803373 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-201T* s/n 28R-7703001 thru 28R-7803373 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28R-201T* s/n 2803001 thru 2803012 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28R-201T* s/n 2803001 thru 2803012 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28R-201T* s/n 2803001 thru 2803012 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28R-201T* s/n 2803001 thru 2803012 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28RT-201 s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28RT-201 s/n all (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28RT-201 s/n all (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28RT-201 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28RT-201T* s/n 28R-7931001 thru 28R-8631005 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28RT-201T* s/n 28R-7931001 thru 28R-8631005 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28RT-201T* s/n 28R-7931001 thru 28R-8631005 (When equipped with wheel 40-86F);	40-86F	Main Wheel
PA-28RT-201T* s/n 28R-7931001 thru 28R-8631005 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-28RT-201T* s/n 2831001 thru 2831038 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-28RT-201T* s/n 2831001 thru 2831038 (When equipped with wheel 40-86B);	40-86B	Main Wheel
PA-28RT-201T* s/n 2831001 thru 2831038 (When equipped with wheel 40-86F);	40-86F	Main Wheel

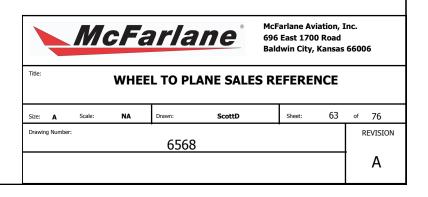


Model and Serial Range	Part Number Replac	<u>Location</u>
PA-28RT-201T* s/n 2831001 thru 2831038 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-30 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-30 s/n all (When equipped with wheel 40-34);	40-34	Main Wheel
PA-30 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-30 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-30 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
PA-31 s/n all (When equipped with wheel 40-102);	40-102	Main Wheel
PA-31 s/n all (When equipped with wheel 40-102A);	40-102A	Main Wheel
PA-31 s/n all (When equipped with wheel 40-130);	40-130	Main Wheel
PA-31 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31 s/n all (When equipped with wheel 40-162);	40-162	Main Wheel
PA-31 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-31-300 s/n all (When equipped with wheel 40-102);	40-102	Main Wheel
PA-31-300 s/n all (When equipped with wheel 40-102A);	40-102A	Main Wheel
PA-31-300 s/n all (When equipped with wheel 40-130);	40-130	Main Wheel
PA-31-300 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31-300 s/n all (When equipped with wheel 40-162);	40-162	Main Wheel
PA-31-300 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-31-325 s/n all (When equipped with wheel 40-102A);	40-102A	Main Wheel
PA-31-325 s/n all (When equipped with wheel 40-130);	40-130	Main Wheel
PA-31-325 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31-325 s/n all (When equipped with wheel 40-162);	40-162	Main Wheel
PA-31-325 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-31-350 s/n all (When equipped with wheel 40-102A);	40-102A	Main Wheel
PA-31-350 s/n all (When equipped with wheel 40-130);	40-130	Main Wheel

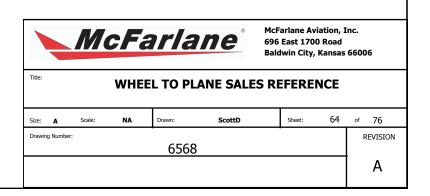

<u>Model and Serial Range</u> PA-31-350 s/n all (When equipped with wheel 40-140);	Part Number Replaces 40-140	<u>Location</u> Aux Wheel
PA-31-350 s/n all (When equipped with wheel 40-141);	40-141	Main Wheel
PA-31-350 s/n all (When equipped with wheel 40-162);	40-162	Main Wheel
PA-31-350 s/n all (When equipped with wheel 40-195);	40-195	Main Wheel
PA-31-350 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-31-350 (T1020) s/n all (When equipped with wheel 40-130);	40-130	Main Wheel
PA-31-350 (T1020) s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31-350 (T1020) s/n all (When equipped with wheel 40-141);	40-141	Main Wheel
PA-31P s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31P s/n all (When equipped with wheel 40-141);	40-141	Main Wheel
PA-31P s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-31P-350 s/n all (When equipped with wheel 40-130);	40-130	Main Wheel
PA-31P-350 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31P-350 s/n all (When equipped with wheel 40-141);	40-141	Main Wheel
PA-31T s/n all (When equipped with wheel 40-106);	40-106	Main Wheel
PA-31T s/n all (When equipped with wheel 40-106A);	40-106A	Main Wheel
PA-31T s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31T1 s/n all (When equipped with wheel 40-106);	40-106	Main Wheel
PA-31T1 s/n all (When equipped with wheel 40-106A);	40-106A	Main Wheel
PA-31T1 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31T2 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31T2 s/n all (When equipped with wheel 40-167);	40-167	Main Wheel
PA-31T3 (T1040) s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-31T3 (T1040) s/n all (When equipped with wheel 40-167);	40-167	Main Wheel
PA-31T3 (T1040) s/n all (When equipped with wheel 40-167A);	40-167A	Main Wheel



Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
PA-32-260 s/n all (When equipped with wheel 38501);	38501		Aux Wheel
PA-32-260 s/n all (When equipped with wheel 40-120);	40-120		Main Wheel
PA-32-260 s/n all (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-32-260 s/n all (When equipped with wheel 40-76B);	40-76B		Aux Wheel
PA-32-260 s/n all (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-32-260 s/n all (When equipped with wheel 40-8);	40-8		Aux Wheel
PA-32-260 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
PA-32-260 s/n all (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32-260 s/n all (When equipped with wheel D-30665);	D-30665		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 38501);	38501		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 40-120);	40-120		Main Wheel
PA-32-300 s/n all (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32-300 s/n all (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 40-76B);	40-76B		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 40-76F);	40-76F		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 40-8);	40-8		Aux Wheel
PA-32-300 s/n all (When equipped with wheel 40-90);	40-90		Main Wheel
PA-32-300 s/n all (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32-300 s/n all (When equipped with wheel D-30665);	D-30665		Aux Wheel
PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel 40-90A);	40-90A		Main Wheel

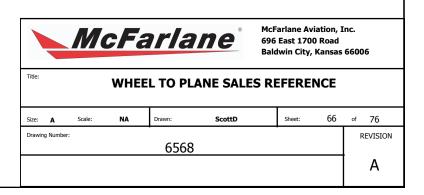


<ul> <li>Model and Serial Range</li> <li>PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel D-30500);</li> </ul>	Part Number Replaces D-30500	<u>Location</u> Aux Wheel
PA-32-301* s/n 32-8006002 thru 32-8606023 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-32-301* s/n 3206001 thru 3206060 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-32-301FT s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32-301FT s/n all (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-32-301FT s/n all (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-32-301T s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32-301T s/n all (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-32-301T s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32-301T s/n all (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32-301T s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-32-301T s/n all (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-32-301XTC s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32-301XTC s/n all (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-32-301XTC s/n all (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-32R-300 s/n all (When equipped with wheel 40-120);	40-120	Main Wheel

		M	cFa	arla	ne	696	arlane Av East 170 Iwin City,	0 Road		)6
Title:			WHE	EL TO PL	ANE SALE	S RI	FERE	NCE		
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	67	of	76
Drawin	ıg Numbe	r:		6568	3				F	REVISION
										Α

ev Model and Serial Range	Part Number	Replaces	<u>Location</u>
PA-32R-300 s/n all (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32R-300 s/n all (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32R-300 s/n all (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32R-300 s/n all (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-32R-301* s/n 32R-8013001 thru 32R-8613006 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32R-301* s/n 32R-8013001 thru 32R-8613006 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32R-301* s/n 32R-8013001 thru 32R-8613006 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32R-301* s/n 32R-8013001 thru 32R-8613006 (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-32R-301* s/n 3213001 thru 3213103 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32R-301* s/n 3213001 thru 3213103 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32R-301* s/n 3213001 thru 3213103 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32R-301* s/n 3213001 thru 3213103 (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-32R-301* s/n 3246001 thru 3246999 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32R-301* s/n 3246001 thru 3246999 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32R-301* s/n 3246001 thru 3246999 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32R-301* s/n 3246001 thru 3246999 (When equipped with wheel D-30500);	D-30500		Aux Wheel
PA-32R-301T* s/n 32R-8029001 thru 32R-8629008 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-32R-301T* s/n 32R-8029001 thru 32R-8629008 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-32R-301T* s/n 32R-8029001 thru 32R-8629008 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-32R-301T* s/n 32R-8029001 thru 32R-8629008 (When equipped with wheel D-30500);	D-30500		Aux Wheel



v Model and Serial Range PA-32R-301T* s/n 3229001 thru 3229003 (When equipped with wheel 40-120C);	Part Number R 40-120C	eplaces Location Main Wheel
PA-32R-301T* s/n 3229001 thru 3229003 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32R-301T* s/n 3229001 thru 3229003 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32R-301T* s/n 3229001 thru 3229003 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-32R-301T* s/n 3257001 thru 3257999 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32R-301T* s/n 3257001 thru 3257999 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32R-301T* s/n 3257001 thru 3257999 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32R-301T* s/n 3257001 thru 3257999 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-32RT-300 s/n all (When equipped with wheel 40-120);	40-120	Main Wheel
PA-32RT-300 s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32RT-300 s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32RT-300 s/n all (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32RT-300 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-32RT-300T s/n all (When equipped with wheel 40-120);	40-120	Main Wheel
PA-32RT-300T s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-32RT-300T s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-32RT-300T s/n all (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-32RT-300T s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-34-200 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-34-200 s/n all (When equipped with wheel 40-120);	40-120	Main Wheel
PA-34-200 s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel

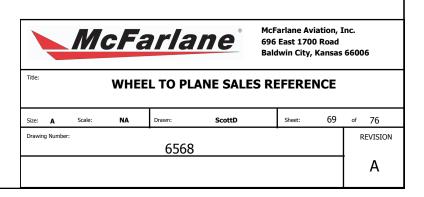


<ul> <li>Model and Serial Range</li> <li>PA-34-200 s/n all (When equipped with wheel 40-76B);</li> </ul>	<u>Part Number</u> <u>Replaces</u> 40-76B	<u>Location</u> Aux Wheel
PA-34-200 s/n all (When equipped with wheel 40-76F);	40-76F	Aux Wheel
PA-34-200 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-34-200 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
PA-34-200 s/n all (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-34-200T s/n all (When equipped with wheel 40-120);	40-120	Main Wheel
PA-34-200T s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-34-200T s/n all (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-34-200T s/n all (When equipped with wheel 40-76F);	40-76F	Aux Wheel
PA-34-200T s/n all (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-34-200T s/n all (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-34-220T* s/n 34-8133001 thru 34-8633031 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-34-220T* s/n 34-8133001 thru 34-8633031 (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-34-220T* s/n 34-8133001 thru 34-8633031 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-34-220T* s/n 34-8133001 thru 34-8633031 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-34-220T* s/n 34-8133001 thru 34-8633031 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-34-220T* s/n 3433001 thru 3433172 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-34-220T* s/n 3433001 thru 3433172 (When equipped with wheel 40-56B);	40-56B	Aux Wheel
PA-34-220T* s/n 3433001 thru 3433172 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-34-220T* s/n 3433001 thru 3433172 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-34-220T* s/n 3433001 thru 3433172 (When equipped with wheel D-30665);	D-30665	Aux Wheel
PA-34-220T* s/n 3448001 thru 3448079 (When equipped with wheel 40-120C);	40-120C	Main Wheel

MCFarlane Wickerlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas 66006										
WHEEL TO PLANE SALES REFERENCE										
Size:	A	Scale:	NA	Drawn:	ScottD		Sheet:	70	of	76
Drawin	ıg Numbe	r:							F	REVISION
	6568					ļ				
										Α


ev Model and Serial Range	Part Number	<u>Replaces</u>	<u>Location</u>
PA-34-220T* s/n 3448001 thru 3448079 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-34-220T* s/n 3448001 thru 3448079 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-34-220T* s/n 3448001 thru 3448079 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-34-220T* s/n 3448001 thru 3448079 (When equipped with wheel D-30665);	D-30665		Aux Wheel
PA-34-220T* s/n 3447001 thru 3447029 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-34-220T* s/n 3447001 thru 3447029 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-34-220T* s/n 3447001 thru 3447029 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-34-220T* s/n 3447001 thru 3447029 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-34-220T* s/n 3447001 thru 3447029 (When equipped with wheel D-30665);	D-30665		Aux Wheel
PA-34-220T* s/n 3449001 thru 3449999 (When equipped with wheel 40-120C);	40-120C		Main Wheel
PA-34-220T* s/n 3449001 thru 3449999 (When equipped with wheel 40-56B);	40-56B		Aux Wheel
PA-34-220T* s/n 3449001 thru 3449999 (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-34-220T* s/n 3449001 thru 3449999 (When equipped with wheel 40-90A);	40-90A		Main Wheel
PA-34-220T* s/n 3449001 thru 3449999 (When equipped with wheel D-30665);	D-30665		Aux Wheel
PA-36-285 s/n all (When equipped with wheel 40-101);	40-101		Main Wheel
PA-36-300 s/n all (When equipped with wheel 40-101);	40-101		Main Wheel
PA-36-375 s/n all (When equipped with wheel 40-101);	40-101		Main Wheel
PA-38-112 s/n all (When equipped with wheel 40-56);	40-56		Aux Wheel
PA-38-112 s/n all (When equipped with wheel 40-59D);	40-59D		Main Wheel
PA-38-112 s/n all (When equipped with wheel 40-77B);	40-77B		Aux Wheel
PA-38-112 s/n all (When equipped with wheel 40-77C);	40-77C		Aux Wheel




<u>Model and Serial Range</u> PA-38-112 s/n all (When equipped with wheel 40-78B);	Part Number Replaces 40-78B	<u>Location</u> Main Wheel
PA-38-112 s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-39 s/n all (When equipped with wheel 38501);	38501	Aux Wheel
PA-39 s/n all (When equipped with wheel 40-34);	40-34	Main Wheel
PA-39 s/n all (When equipped with wheel 40-76B);	40-76B	Aux Wheel
PA-39 s/n all (When equipped with wheel 40-8);	40-8	Aux Wheel
PA-39 s/n all (When equipped with wheel 40-90);	40-90	Main Wheel
PA-42 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-42 s/n all (When equipped with wheel 40-166);	40-166	Main Wheel
PA-42-1000 s/n all (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-42-1000 s/n all (When equipped with wheel 40-176);	40-176	Main Wheel
PA-42-720* s/n 42-5501003 thru 42-5501039 (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-42-720* s/n 42-5501003 thru 42-5501039 (When equipped with wheel 40-166);	40-166	Main Wheel
PA-42-720* s/n 42-8301001 thru 42-8301002 (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-42-720* s/n 42-8301001 thru 42-8301002 (When equipped with wheel 40-166);	40-166	Main Wheel
PA-42-720* s/n 42-5501040 thru 42-5501060 (When equipped with wheel 40-140);	40-140	Aux Wheel
PA-42-720* s/n 42-5501040 thru 42-5501060 (When equipped with wheel 40-166);	40-166	Main Wheel
PA-44-180* s/n 44-7995001 thru 44-8195026 (When equipped with wheel 40-120);	40-120	Main Wheel
PA-44-180* s/n 44-7995001 thru 44-8195026 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-44-180* s/n 44-7995001 thru 44-8195026 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-44-180* s/n 44-7995001 thru 44-8195026 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-44-180* s/n 44-7995001 thru 44-8195026 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-44-180* s/n 4495001 thru 4495013 (When equipped with wheel 40-120);	40-120	Main Wheel

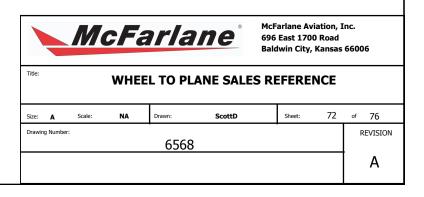


Rev Model and Serial Range PA-44-180* s/n 4495001 thru 4495013 (When equipped with wheel 40-120C);	Part Number Replaces 40-120C	<u>Location</u> Main Wheel
PA-44-180* s/n 4495001 thru 4495013 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-44-180* s/n 4495001 thru 4495013 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-44-180* s/n 4495001 thru 4495013 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-44-180* s/n 4496001 thru 4496999 (When equipped with wheel 40-120);	40-120	Main Wheel
PA-44-180* s/n 4496001 thru 4496999 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-44-180* s/n 4496001 thru 4496999 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-44-180* s/n 4496001 thru 4496999 (When equipped with wheel 40-90A);	40-90A	Main Wheel
PA-44-180* s/n 4496001 thru 4496999 (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-44-180T s/n all (When equipped with wheel 40-120);	40-120	Main Wheel
PA-44-180T s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-44-180T s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-44-180T s/n all (When equipped with wheel D-30500);	D-30500	Aux Wheel
PA-46-310P* s/n 46-8408001 thru 46-8608067 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-46-310P* s/n 46-8408001 thru 46-8608067 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-310P* s/n 4608001 thru 4608140 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-46-310P* s/n 4608001 thru 4608140 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-350P (w/ G1000) s/n all (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-46-350P (w/ G1000) s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-350P (w/o G1000)* s/n 4622001 thru 4622200 (When equipped with wheel 40-120C);	40-120C	Main Wheel

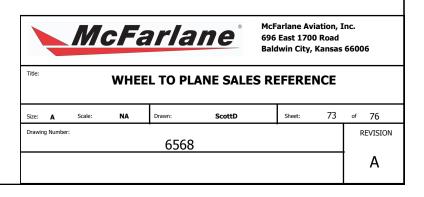

Rev Model and Serial Range PA-46-350P (w/o G1000)* s/n 4622001 thru 4622200 (When equipped with wheel 40-77B);	<u>Part Number</u> <u>Replaces</u> 40-77B	<u>Location</u> Aux Wheel
PA-46-350P (w/o G1000)* s/n 4636001 thru 4636999 (When equipped with wheel 40-120C);	40-120C	Main Wheel
PA-46-350P (w/o G1000)* s/n 4636001 thru 4636999 (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-500TP (w/ G1000) s/n all (When equipped with wheel 40-142);	40-142	Main Wheel
PA-46-500TP (w/ G1000) s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-500TP (w/ G1000) s/n all (When equipped with wheel 40-77G);	40-77G	Aux Wheel
PA-46-500TP (w/o G1000) s/n all (When equipped with wheel 40-142);	40-142	Main Wheel
PA-46-500TP (w/o G1000) s/n all (When equipped with wheel 40-77B);	40-77B	Aux Wheel
PA-46-500TP (w/o G1000) s/n all (When equipped with wheel 40-77G);	40-77G	Aux Wheel
S-1S s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-1S s/n all (When equipped with wheel 40-78J);	40-78J	Main Wheel
S-1T s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-2 s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-2A s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-2B s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-2C s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
S-2S s/n all (When equipped with wheel 40-78B);	40-78B	Main Wheel
R44 s/n all (When equipped with wheel 40-107A);	40-107A	Main Wheel
108 s/n all (When equipped with wheel 3040);	3040	Main Wheel
108 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
108 s/n all (When equipped with wheel 40-97E);	40-97E	Main Wheel
108-1 s/n all (When equipped with wheel 3040);	3040	Main Wheel
108-1 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
108-1 s/n all (When equipped with wheel 40-97E);	40-97E	Main Wheel
108-2 s/n all (When equipped with wheel 3040);	3040	Main Wheel
108-2 s/n all (When equipped with wheel 40-6);	40-6	Main Wheel
108-2 s/n all (When equipped with wheel 40-97E);	40-97E	Main Wheel
108-3 s/n all (When equipped with wheel 40-28);	40-28	Main Wheel

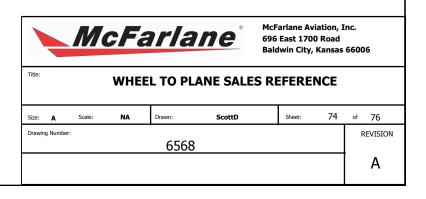

Rev Model and Serial Range 108-3 s/n all (When equipped with wheel 40-97E);	Part Number 40-97E	Replaces	<u>Location</u> Main Wheel
108-5 s/n all (When equipped with wheel 40-28);	40-28		Main Wheel
108-5 s/n all (When equipped with wheel 40-97E);	40-97E		Main Wheel
F19 s/n all (When equipped with wheel 3050);	3050		Main Wheel
F19 s/n all (When equipped with wheel 40-7);	40-7		Main Wheel
F19 s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
F21 s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
F21A s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
F22 s/n all (When equipped with wheel 40-77);	40-77		Aux Wheel
F22 s/n all (When equipped with wheel 40-86);	40-86		Main Wheel
S2R s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R s/n all (When equipped with wheel 40-129);	40-129		Main Wheel
S2R s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2RHG-T65 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2RHG-T65 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-R1340 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-R1340 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-R1820 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-R1820 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-R3S s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-R3S s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-T11 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-T11 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-T15 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-T15 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-T34 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-T34 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-T65 s/n all (When equipped with wheel 40-112);	40-112		Aux Wheel
S2R-T65 s/n all (When equipped with wheel 40-133);	40-133		Main Wheel
S2R-T660 s/n all (When equipped with wheel 40-403);	40-403		Main Wheel

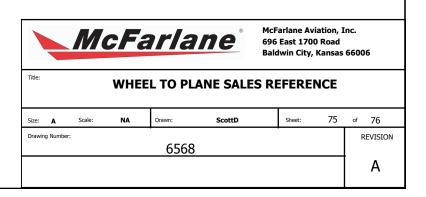

Rev Model and Serial Range S2R-T660 s/n all (When equipped with wheel	Part Number 40-76H	Replaces		Location Aux Wheel		
40-76H);						
<ul> <li>Denotes partial model eligibility</li> <li>"MC" prefix denotes McFarlane Aviation, Inc. manufacture</li> </ul>						
Report Generated: 5/24/2012 11:20:26AM						
	M	cFari	lane	AcFarlane Aviation, I 196 East 1700 Road Baldwin City, Kansas		
	Title:	WHEEL TO PLANE SALES REFERENCE				
	Size: A Scale:	NA Drawn:	ScottD	Sheet: 76	of 76	
	Drawing Number:	6.5	568		REVISION	